BRILIX
SWIMMING POOL EQUIPMENT

EN

AFRODITE HOT TUB

INSTALLATION
AND
USER MANUAL

Please read the instructions for use

Illustration photo

Table of Contents

1. Hot tub parameters 3
1.1 Jets 3
2. Basic features 3
3. Indication via LED diodes 4
4. Overview and description of controls 5
4.1 Two-speed pump 1 operation 5
4.2 Auxiliary equipment (AUX, Pump 2) 5
4.3 Controlling the Variable Speed Blower 5
4.4 Controlling the variable colour light 5
4.5 Temperature settings 5
5. Pump features 6
5.1 Two-speed pump 1 6
5.2 Cleaning cycle 6
6. Auxiliary equipment (AUX) on/off (Pump 2) 7
7. Variable speed blower (SPVSB) 7
7.1 Blower (SPVSB) variable speed mode 8
8. Variable colour light (SPVCL) 8
8.1 Adjustable light brightness mode 9
8.2 Light effect mode 9
8.2.1 Light effect mode speed settings 10
9. Menus 11
9.1 Main menu 12
9.2 Set temperature (temperature controls) 13
9.3 User Timer 13
9.4 Clock 14
9.5 Clock setup 15
9.6 User alarms 15
9.6.1 Configuring the user alarm 16
9.6.2 Deactivating the user alarm 17
9.7 Sleep mode timer 17
9.7.1 Configuring the sleep mode 17
9.7.2 Deactivating the sleep mode period 19
9.7.3 Cleaning the pipework 20
9.8 Maintenance timers 20
9.8.1 Configuring the maintenance timer 20
9.8.2 Confirming the maintenance timer 21
9.8.3 Configuring the maintenance timer 22
9.8.4 Deactivating the maintenance timer 22
9.9 Key clicks (on/off) 22
9.9.1 Main display 23
9.9.2 Changing the main display 23
9.9.3 Colour and brightness of the panel light 23
9.9.4 Changing the control panel backlighting colour 23
9.9.5 Changing the control panel backlighting brightness 23
9.9.6 Synchronisation of panel and hot tub lighting (on/off) 24
9.9.7 Activating/deactivating lighting synchronisation 24
9.10 Advanced options sub-menu 24
9.10.1 Heating controls/management 25
9.10.2 Changing the heating control setting 25
9.10.3 Automatic filtration/disinfection 26
9.10.4 Adjusting the filtration time 26
9.10.5 Adjusting the filtration frequency 26
9.11 Factory settings 27
10. Additional Features 28
10.1 Control panel key lock 28
10.2 Activating the key lock 28
10.3 Deactivating the key lock 28
10.4 Adjusting the control panel display contrast 28
10.5 Reversing the display 29
10.6 Language selection 29
11. Radio with DVD 30
12. LCD TV 38
13. Self-diagnostic error codes 49
14. Installation instructions 51
15. Caring for your hot tub 53
15.1 Filtration cartridges (installation, removal, maintenance) 53
16. Winter and summer use 54
17. Troubleshooting 56
18. Safety instructions 57

Thank you for choosing our product and trusting our company. To ensure the use of this product brings you joy, please read these instructions carefully and follow the user‘s manual precisely before using the equipment to prevent damage to the equipment or needless injuries.

1. Hot tub parameters

Seat	3	Preparation for thermal pump	√
Couch	2	Heating	3 kW
Dimensions (cm)	208 x 208 x 88	Cartridge filter	2 units
Weight	340 kg	Ozone generator	√
Water quantity	1900 l	Blower with aromatherapy	√
Aristech acrylic	√	Ergonomic head rest	1
Chemically treated wooden frame	√	Head rest*	2
API panelling	√	Diversion valve	1
Arctic reinforced thermal cover	√	Air valve	2
Shell thermal insulation	√	Light	1
Panel thermal insulation	4 cm	Jet with LED light	16
2-tone RD stainless steel jets	47	DVD player	√
3 hp 1-speed Davey pump	1	Speakers	2
3 hp 2-speed Davey pump	1	Fountain with LED lighting	2
TV telescope control	√	Fountain controller	√
TV 17“	√		

** Headrests are located inside the spa, fixed by heater unit (cabinet panel right beneath the control panel).*

1.1 Jets

The rate of flow of water through the jets can be adjusted by turning them clockwise (right to open, left to close). Therefore, water not coming out of a jet may not be a defect: the jet may just be closed. Not all the jets can be adjusted like this.

2. Basic features

The control panel has a large display with four digits and two rows of text. The display normally shows three figures: the current hot tub temperature, the set (required) hot tub temperature, and the time (day of the week and time). As the default, the current hot tub temperature is shown in the digits and the time and the set temperature are in the two rows of text. The user may change this configuration if a different arrangement is preferred.

Whenever you press the control panel, the two text rows describe the newly selected state briefly. Likewise, when the control panel is busy performing a task, it displays a text explaining what is going on (e.g., sleep mode, pump cleaning and pump priming with water before start-up). Each such report and the associated features are described in the following chapters.

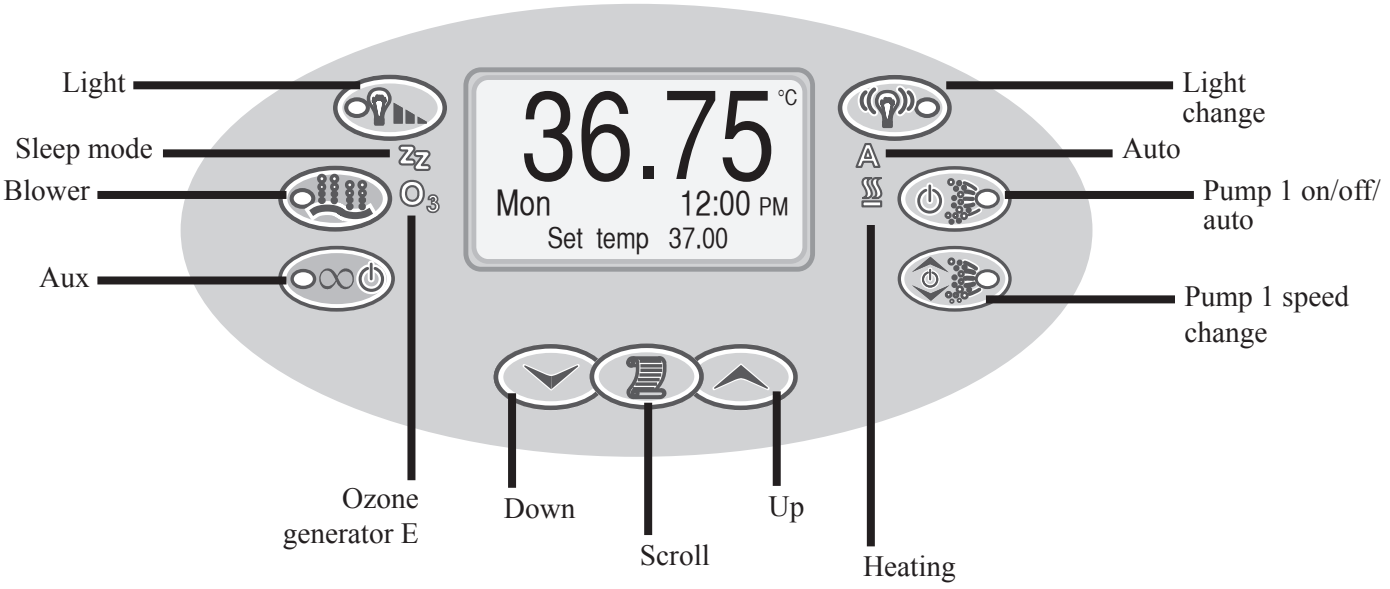

3. Indication via LED diodes

Auto

This diode shines green if the automatic control is activated, and is off when pump 1 is controlled manually. In the automatic „PUMP AUTO“ setting, pump 1 runs as needed to warm up the hot tub and ensure observance of the minimum filtration times. If the diode flashes, the water sensor has detected no water in the heater housing. In that case, the LCD display also reads „WATER PRIMING, PLEASE WAIT“.

Heating

This diode indicates when the heater is on. The heater comes on and goes off as needed whenever the pump is running.

Sleep mode

This diode is on whenever the control panel is in a predefined sleep mode. This diode shines green when the control panel is in a sleep mode. If it is „woken“ manually, the diode changes to orange. During the sleep mode, the LCD display also reads „SLEEPING, PRESS ANY KEY“.

Ozone

This diode shines green whenever the ozone generator is on. The ozone generator may switch off automatically when any button on the control panel is pressed. If this happens, the ozone generator does not come on again sooner than approx. 30 minutes after the last control panel button was pressed.

4. Overview and description of controls

4.1 Two-speed pump 1 operation

Pump 1 button: Press it to change the pump mode
(PUMP AUTO, PUMP ON, PUMP OFF)

Pump 1 speed change button: Press it to change the pump speed (LOW, HIGH)

See Chapter 5 for more detailed information.

4.2 Auxiliary equipment (AUX, Pump 2)

Press the button to activate/deactivate the Aux outlet.

See Chapter 6 for more detailed information.

4.3 Controlling the Variable Speed Blower

Press this button to activate/deactivate the blower and select its speed.

Use the UP and DOWN buttons to set the blower speed.

See Chapter 7 for more detailed information.

4.4 Controlling the variable colour light

Brightness button: Press this button to activate/deactivate the light and change its brightness.

Light mode button: Press this to change the light effects.

See Chapter 6 for more detailed information.

4.5 Temperature settings

Press **SCROLL** once to display the Main Menu (see below).

Press **UP** once to display the Set Temp menu (see below).

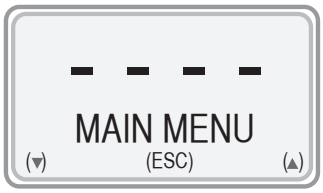

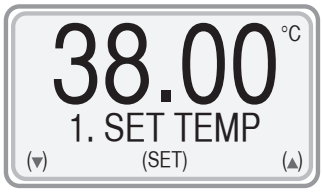

Press **SCROLL** to change the temperature or use the **UP** and **Down** buttons to select the desired temperature. Press the **SCROLL** button to select the desired temperature.
See Chapter 9.2 for more detailed information.

5. Pump features

5.1 Two-speed pump 1

Pump 1 is controlled by two buttons on the control panel: one switches the pump on and off, while the other changes its speed. When the hot tub is in the PUMP AUTO mode. The pump speed selected by these buttons is shown on the LCD display for several seconds and is also depicted by several diodes. The AUTO diode shines green when the PUMP AUTO mode is active, and is off when the mode is PUMP OFF. Likewise, the Pump 2 diodes shine green, red or are off when the pump is in the low speed, high speed or off.

Press once (pump on)

The LCD reads „PUMP LOW“; the AUTO diode is off, the button diode shines green. This mode is used for activating pump 1 even though the system is in the sleep mode or does not need the pump to run in the auto mode for heating or filtration.

Press once (pump high speed)

The LCD reads „PUMP High“; the button can be used to change the pump speed.

Press twice (pump low speed)

The LCD reads „PUMP Low“; the button can be used to change the pump speed.

Press twice (pump off)

The LCD reads „PUMP OFF“; the AUTO diode is off, the button diode is off. This mode is used for deactivating pump 1.

Press 3 times (pump auto mode)

The LCD reads „PUMP AUTO“; the AUTO diode shines green. This is the default start mode, in which pump 1, heating and filtration are controlled automatically. Pressing the high/low speed button in this mode has the same effect as pressing the On/Off button.

Notes:

1. If the pump speed change button is left activated in the Pump High position, it is deactivated automatically after 25 minutes.
2. If the heater is on, the operation of the pump may cause the heater to load the circuit interrupter and switch off.

If this happens, the heater resumes operation about 5 seconds after the pump mode is cancelled.

5.2 Cleaning cycle

If necessary, you can activate the cleaning cycle, which filters the water after using the hot tub. To do it, simply press the pump on/off button to leave the AUTO mode and activate the pump. The pump will run for a fixed period of time (90 minutes), and the water will circulate through the filter cartridges. The system then reverts to the AUTO mode and maintains the water temperature ready for the next use of the hot tub. Press the pump 1 speed change button to enter PUMP LOW, and the 90-minute cleaning cycle starts.

Comments:
1. The heating will start and stop as needed whenever pump 1 is running in either the PUMP AUTO or PUMP ON mode.
2. The PUMP AUTO mode will be activated after 90 minutes while the control panel is not activated, as long as it is left in the PUMP ON or PUMP OFF mode.

6. Auxiliary equipment (AUX) on/off (Pump 2)

Pressing the **AUX** button twice controls the equipment functioning as follows:

First pressing (auxiliary equipment on)
the display reads „Aux on“; the button diode shines green

Second pressing (auxiliary equipment off)
the display reads „Aux off“; the button diode is off

Comments:
If the auxiliary equipment is left on, it turns off automatically after 25 minutes.
1. If the heater is on, the operation of this equipment may cause the heater to load the disconnector and switch off.
2. If this happens, the heater will resume operation about 5 seconds after the „Aux“ mode is deactivated.

7. Variable speed blower (SPVSB)

The Blower (Air) button controls the variable speed blower (if installed). It is used to activate/deactivate the blower and choose from the different operating modes. Pressing the **BLOWER** button four times controls the blower as follows:

1st pressing (Blower On)
The LCD reads „BLOWER ON HIGH“; the blower is in the highest speed

2nd pressing (Blower Ramping)
The LCD reads „BLOWER RAMPING“; speeds alternate

3rd pressing (Blower Speed)
The LCD reads „BLOWER SPEED“ and a bar chart depicts the current speed setting; the blower speed is adjustable (see below)

4th pressing (Blower Off)
The LCD reads „BLOWER OFF“; the blower is off (default state)

The Blower is fitted with two non-return valves to prevent inundation of the Blower air piping. The Blower is fitted with an outlet for potential dripping water. The outlet is situated and discharges at the bottom of the right-hand corner viewed from the control panel. Minor quantities of water may issue from this outlet, which is a normal feature and cannot be claimed under warranty.

7.1 Blower (SPVSB) variable speed mode

In the variable speed mode, the UP and DOWN buttons are used to set the blower to one of the 9 different speeds. When the UP/DOWN buttons are pressed for the first time, the LCD reads „BLOWER SPEED“ with a bar chart depicting the current speed setting. In this display, press UP and DOWN to adjust the speed as needed. Hold either of the two buttons down to automatically repeat the pressing. This setting is saved and will be restored automatically when you select the variable speed mode again.

DOWN and **UP**

Comments:

1. The UP and DOWN buttons are shared by the Light, Light Change, SPVSB Speed, and the entire system menu. While not in the system menu, the current function of the UP and DOWN buttons depends on which of the 3 features was last adjusted by the button, whether Light, Light Change or Blower.
2. Pressing the Blower (Air) button when the blower is running will only browse through the available options; the LCD will show the current option/selection. This makes it possible to set the function for the UP and DOWN buttons with 1 pressing of the Blower button and display the current blower setting without actually changing the setting.
3. Pressing either UP or DOWN in the full speed mode or the variable speed mode, the SPVSB automatically switches into the adjustable speed mode.
4. If it is left on, the accessory turns off automatically after 25 minutes.
5. If the heater is on, the activation of the SPVSB may cause the heater to load the interrupter and switch off. If this happens, the heater will resume operation approx. 5 seconds after the SPVSB is turned off.

8. Variable colour light (SPVCL)

The variable colour light is controlled via two buttons on the control panel: Light and Light Change (Light brightness and Light effect mode). If the SPVCL is not installed, the buttons can still be used to produce light effects in the control panel as if the light were installed. The Light button selects the light brightness, and the Light Change button selects the light colour and effect. Pressing the Light button five times selects the light brightness as follows:

Press once (High)
The LCD reads „**LIGHT HIGH**“; 100% light brightness

Press twice (Medium)
The LCD reads „**LIGHT MEDIUM**“; 66% light brightness

Press 3 times (Low)
The LCD reads „**LIGHT LOW**“; 33% light brightness

Press 4 times (Adjust)
The LCD reads „**LIGHT ADJUST“;** adjustable brightness mode, the button diode colour changes with the settings when the Up or Down button is pressed. (green 2-32, orange 34-66, red 68-100%)

Press 5 times (Off)
The LCD reads „LIGHT OFF“; the light is off.

Pressing **UP** or **DOWN** in the High, Medium or Low mode will automatically take you to the adjustable mode.

8.1 Adjustable light brightness mode

In the adjustable light brightness mode, the **UP** and **DOWN** buttons are used to adjust the light between 2% and 100% of the maximum brightness (intensity). When the **UP/DOWN** buttons are pressed for the first time, the LCD reads „**LIGHT ADJUST**“ with a bar chart depicting the current setting. In this display, press **UP** and **DOWN** to adjust the brightness as needed. Hold either of the two buttons down to automatically repeat the pressing. This setting is saved and will be restored automatically when you select the adjustable light brightness mode again.

Press 4 times (Light Adjust)

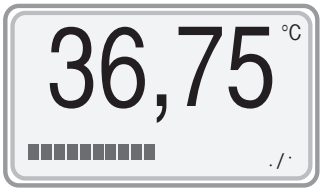

DOWN and **UP**

8.2 Light effect mode

In addition to changing light colours, the hot tub can also produce various light effects. The Light Change mode and the **UP** and **DOWN** buttons are used for choosing the light effect or a preferred colour.
Pressing the Light Change mode button seven times will control the light mode adjustment as follows:

Press once
The LCD reads „**FIXED WHITE**“; the light is pure white with no light effects. Press either **UP** or **DOWN** to select the Preset Colour mode (see below).

Press twice
The LCD reads „**PRESET COLOUR**“; the light colour depends on the previous selection (white as default). Use **UP** and **DOWN** to choose a different available colour. The colour you choose is saved and will be automatically restored when you select the Preset Colour mode again.

Press 3 times
The LCD reads „**SMOOTH CHANGE**“; the light cycles through all its colours perpetually, without staying any of the colours for too long. Use the **UP** and **DOWN** buttons to change the speed of light effect alternations (see chapter 6.2.1 below).

Press 4 times
The LCD reads „**FADE UP/DOWN**“; the light cycles through all its colours one by one. Each of the colours comes on from zero brightness (light off) and then fades back to zero brightness. Use the **UP** and **DOWN** buttons to change the speed of light effect alternations (see chapter 8.2.1 below).

Press 5 times
The LCD reads „**BURST UP/DOWN“;** the light colours alternate one by one. Very similar setting, **FADE UP/DOWN**, only the colour appears very fast and fades slowly. Use the **UP** and **DOWN** buttons to change the speed of light effect alternations (see chapter 8.2.1 below).

Press 6 times
The LCD reads „**DELAYED CHANGE**“; the light colours alternate one by one. Each colour is shown for a short while, then the light switches to the next colour quickly. Use the **UP** and **DOWN** buttons to change the speed of light effect alternations (see chapter 8.2.1 below).

Press 7 times
The LCD reads „**STEP CHANGE**“; the light colours alternate one by one. Use the **UP** and **DOWN** buttons to change the speed of light effect alternations (see chapter 8.2.1 below).

This setting is saved and will be restored automatically when you turn the light on again.

8.2.1 Light effect mode speed settings

Once you have selected a light effect mode („**SMOOTH CHANGE**“ to „**STEP CHANGE**“; see above), you can manually adjust the speed at which the available colours alternate. When the **UP/DOWN** buttons are pressed for the first time, the LCD reads „**EFFECT SPEED**“ with a bar chart depicting the current setting. In this display, press **UP** and **DOWN** to adjust the cycle speed as needed. Hold one of the buttons down to automatically repeat the pressing. In the highest setting, 100%, the speed is about 40 times faster than in the lowest, 2%, and about 6 times faster than in the default setting, 50%. The settings for each light effect is saved separately and will be restored the next time you choose the light effect mode.

DOWN and **UP**

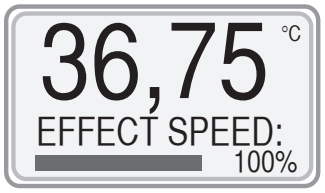

Comments:
1. The **UP** and **DOWN** buttons are shared by the Light, Light Change, SPVSB Blower Speed, and the entire system menu. While not in the system menu, the current function of the UP and DOWN buttons depends on which of the 3 features was last adjusted by the button, whether Light, Light Change or Blower.
2. Pressing either **LIGHT** or Light Change when the light is on will only browse through the available options; the LCD will show the current option/selection. This makes it possible to set the function for the **UP** and **DOWN** buttons and display the current Light or Light Change setting without actually changing the setting.
3. Pressing Light Change when the light is off will switch the light on using the Light High setting.
4. As the default, the control panel backlighting reflects the spa setting, but this feature can be deactivated. See chapter 9.9.5.

9. Menus

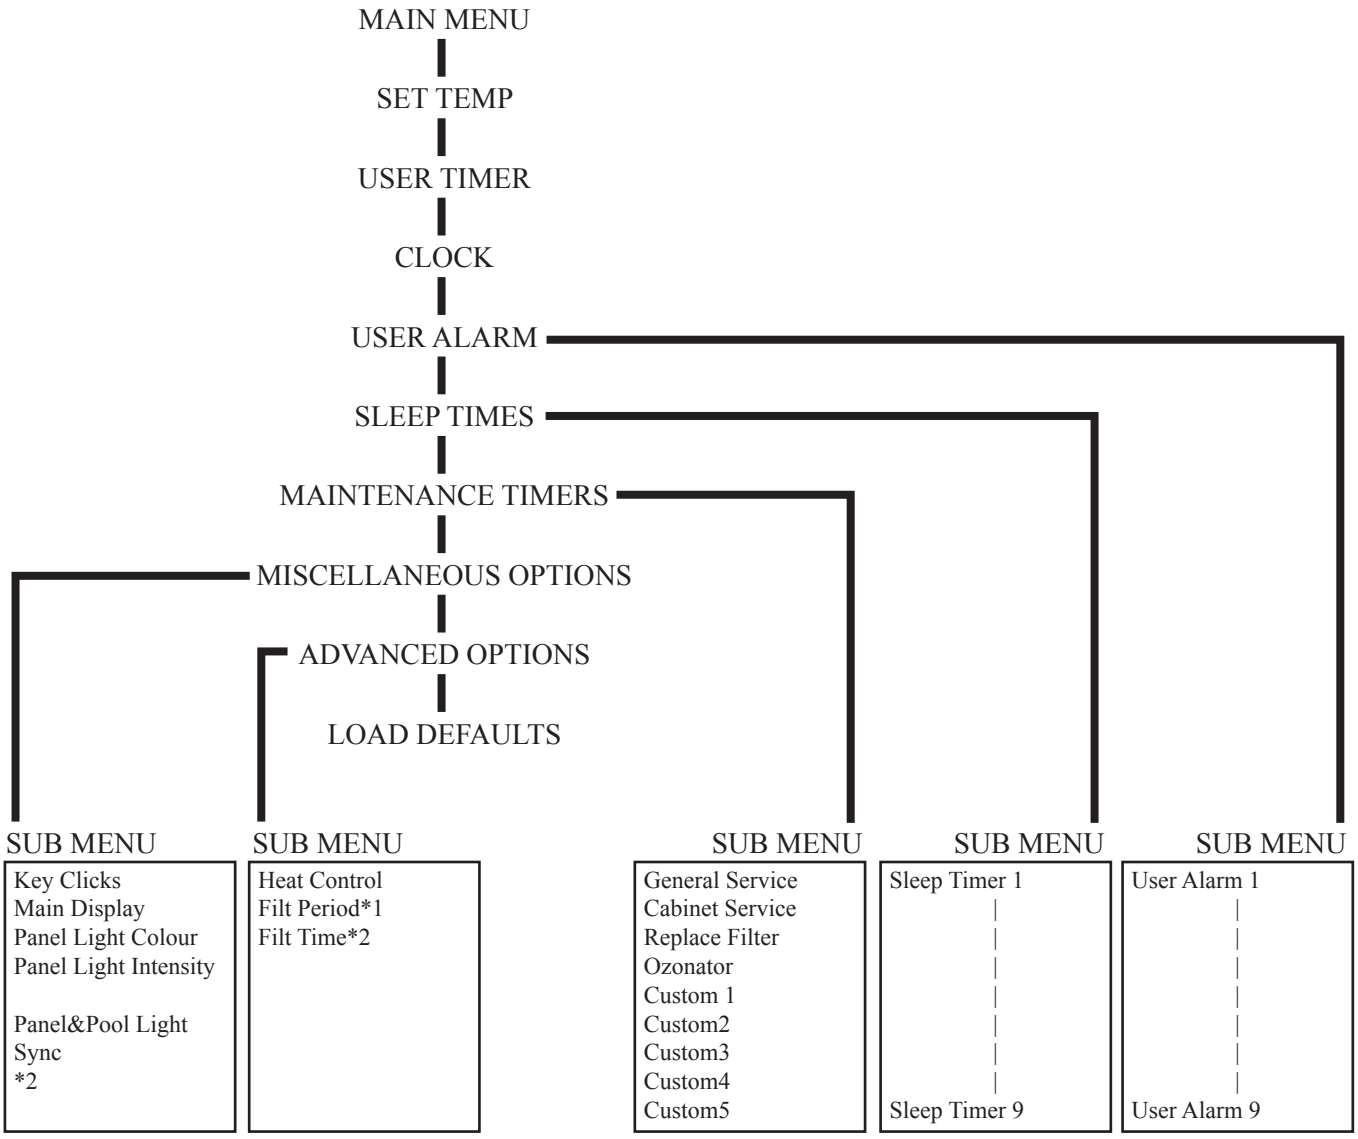

**1 Does not apply for installations with a circulation pump for 24 hours*
**2 Does not apply unless the SPVCL is installed*

Navigating through the system menu

The system menu offers a simple interface for displaying and adjusting most of the user settings. They include, e.g., the preset temperature, sleep mode periods, and filtration time and frequency. The entire system menu only uses three control panel buttons: **DOWN**, **SCROLL** and **UP**. Generally speaking, while in the system menu, the bottom text row on the display will show the function of each of these buttons.

To access the main menu from the default display, press **SCROLL**. The display switches to showing the main menu name. Each menu consists of the menu name and several menu items: the menu items are numbered, the menu name is not. Use the **UP** and **DOWN** buttons to scroll through the main menu. If you do not press any of the control panel buttons for more than a minute while in the system menu, the display automatically reverts to the default screen. However, you need not wait a minute to revert. If you wish to leave the system menu quickly, use the **UP** and **DOWN** buttons to highlight the current menu name, and press **SCROLL**.

Note that the text „(ESC)“ is displayed over the **SCROLL** button when the menu name is displayed, which means you can use the **SCROLL** button to escape from that menu. The action invoked by pressing the **SCROLL** button depends on what menu item is highlighted, and that is shown in the display text over the **SCROLL** button.
The system menu consists of five sub-menus: the User Timer Menu, the Sleep Mode Menu, the Maintenance Timer Menu, the Miscellaneous Options Menu, and the Advanced Options Menu. These sub-menus are accessed via items 4 to 8 from the main menu, in the stated sequence. Simply select one of these items in the main menu and press **SCROLL**. This will get you into the desired sub-menu. Scroll through the sub-menu as you would through the main menu: the interface works just the same. To select any other item either in the main menu or in any of the sub-menus, simply highlight the desired menu item using the **UP** and **DOWN** buttons and then press **SCROLL**.

9.1 Main menu

The main menu is the highest level of the system menu. It provides fast access to temperature, user timer and clock settings. The five sub-menus are accessed via items 4 to 8 from the main menu.
To access the main menu from the default display, simply press **SCROLL**. Read the chapter „Navigating through the system menu“ above, if you have not done so yet.

Press once

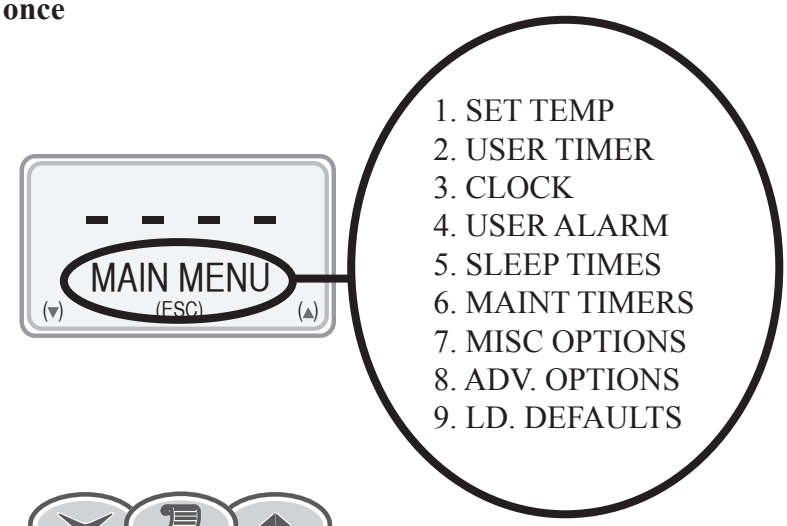

Press **SCROLL** to make the setting.

9.2 Set temperature (temperature controls)

Select the MAIN menu, then press **UP** once.

Set with the **SCROLL** button.

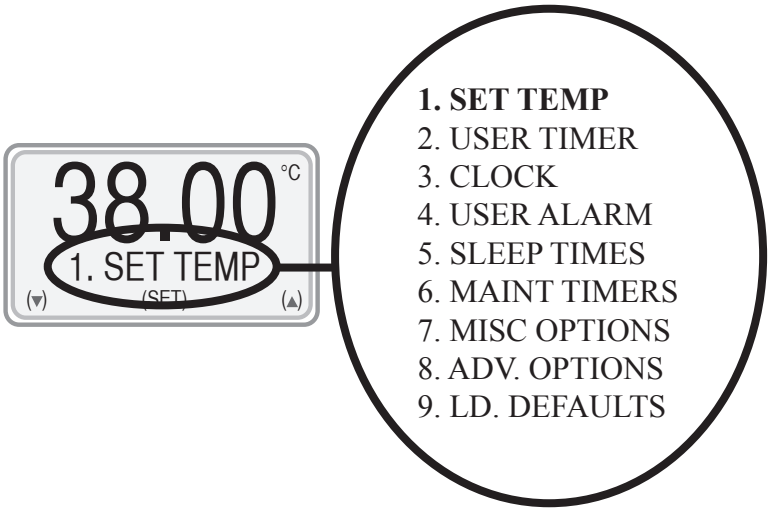

The hot tub has an automatically controlled pump and heater for water filtration and maintaining the water at the required user-defined temperature. The user may leave the system to take care of the hot tub and know that the water will have the right temperature whenever they decide to use the hot tub. When you invoke the set temperature menu item, the current set temperature is shown with four digits in degrees Centigrade (37.00 is the default). The setting range is from 10.00 to 41.50 with a 0.25°C step.

To change the setting, press **SCROLL** when the set temperature menu item is displayed. The current setting will flash and indicate that the value can be changed. Use the **UP** and **DOWN** buttons to adjust the set temperature as required. Hold one of the buttons down to automatically repeat the pressing. Press **SCROLL** once the required temperature has been set. Press **SCROLL** once again to return to the default display (outside the system menu); the new setting is valid immediately.
Note: The temperature in the hot tub will be maintained close to the set temperature, but how close depends on the „Heat Control“ setting; see chapter 9.10.1 for more information.

9.3 User Timer

The User Timer is a timer counting down minutes that can be preset to start the countdown anywhere between 1 and 99 minutes. You can set it when you enter the hot tub to remind you when it is time to get out. The timer will count down the preset time and display the minutes and seconds remaining until the end on the LCD. You will hear two beeps at the turn of every last 10 seconds, and eventually one long beep will sound and the message „**USER TIMER FINISHED**“ will be displayed when the timer has finished the countdown.

To use the user timer, first select it in the main menu. The total time will flash on the LCD (30 minutes as the default). Use the **UP** and **DOWN** buttons to set the time as needed. Hold one of the buttons down to automatically repeat the pressing. Press the **SCROLL** button when the required time is reached. This starts the timer and the display reads „**TIMER STARTED** (STOP)“. When this message is displayed, you can stop the timer immediately by pressing **SCROLL** again. Otherwise, wait for about five seconds till the message disappears and you return to the default display, where the timer runs in the background. Select the MAIN menu, then press **UP** twice.

Press twice

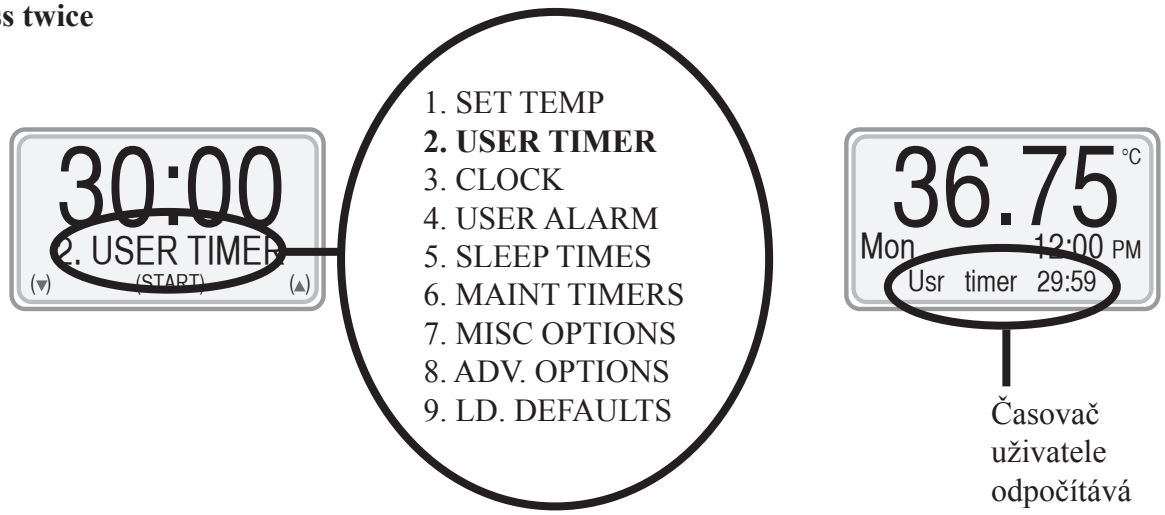

9.4 Clock

The hot tub has a real time clock, which retains the correct time even during short power failures. The clock allows the user to read time comfortably, and is also used for timing the sleep mode periods, filtration and user timers.

The clock can be configured to work in either a 12-hour or 24-hour mode. This setting also defines how the user alarms and sleep mode start and end times are displayed.

Press 3 times

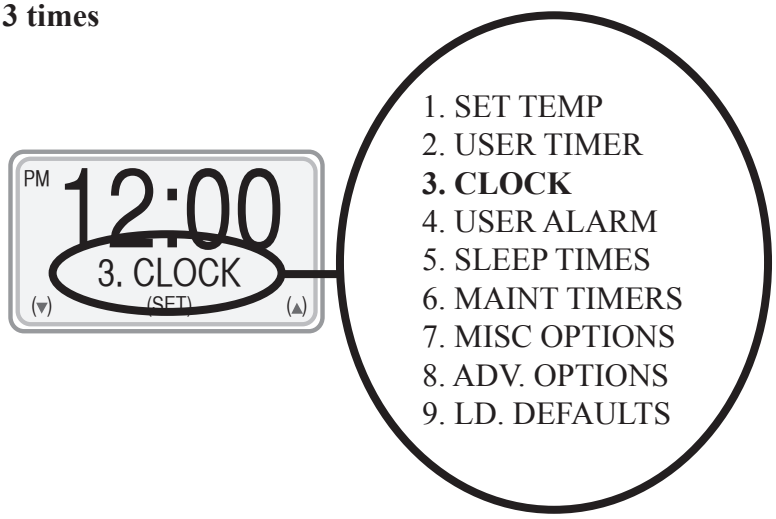

9.5 Clock setup

1. Select the menu item Clock in the main menu.
2. Press **SCROLL** to start setting the clock.
3. Use the **UP** and **DOWN** buttons to choose the required clock mode (12 or 24 hour).
4. Press the **SCROLL** button to confirm the current setting and go to the next field.
5. Use the **UP** and **DOWN** buttons to set the highlighted field as needed. Hold one of the buttons down to automatically repeat the pressing.
6. Repeat until the mode, hours, minutes and day of the week are set.

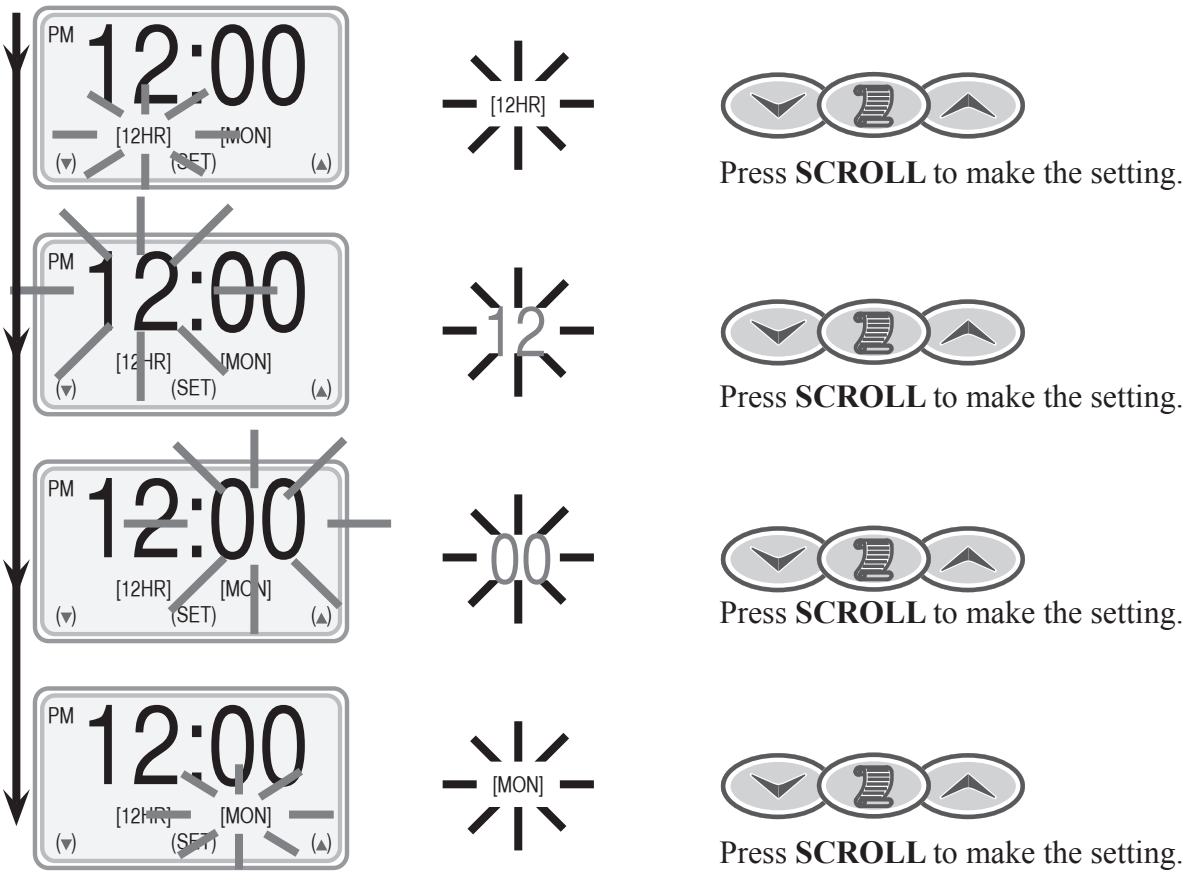

When you press **SCROLL** to set the day of the week, the display reverts to the default screen.

9.6 User alarms

These alarms work like a normal alarm clock, the advantage being you can specify on which days the alarm should be active.

When the alarm goes off, the control panel beeps and displays the current time and a text with the active alarm number. The beep lasts for a minute or until you press a button on the control panel. This has no effect on any other equipment such as the pumps, the blower, the light, etc.

The alarms are only active within an hour of the last pressing of a button on the control panel. If you do not use the spa for more than an hour, no sound is made.

9.6.1 Configuring the user alarm

Select the MAIN menu, then press **UP** four times.

Press 4 times

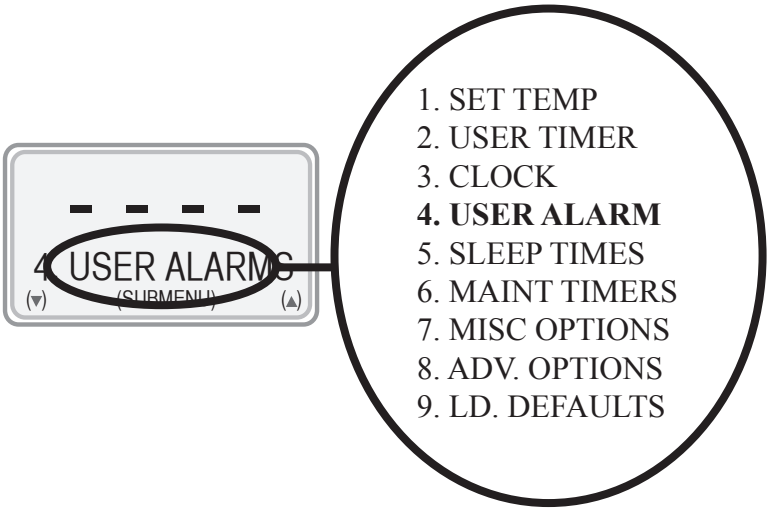

1. Select the **USER ALARMS** sub-menu by pressing **SCROLL**.

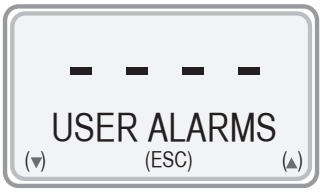

2. Press **UP** or **DOWN** to select the required days of the week when the user alarm will be active. You can choose from 15 different days of the week settings from Monday to Sunday and various combinations of each setting.

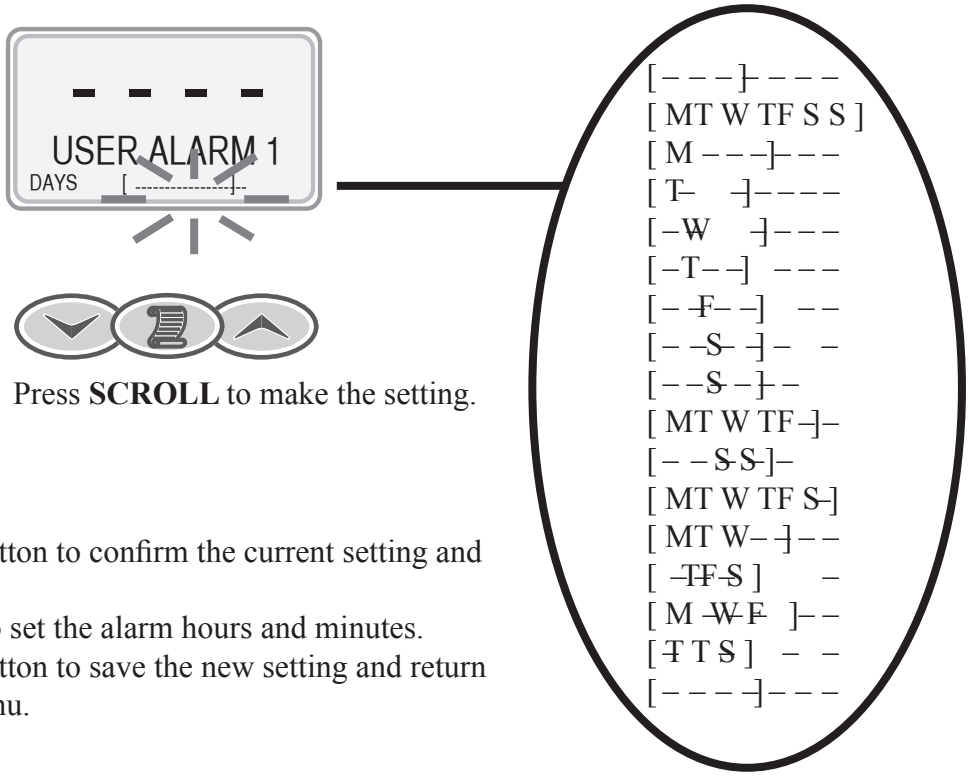

Press **SCROLL** to make the setting.

3. Press the **SCROLL** button to confirm the current setting and go to the next field.
4. Repeat steps 2 and 3 to set the alarm hours and minutes.
5. Press the **SCROLL** button to save the new setting and return to the user alarm sub-menu.

9.6.2 Deactivating the user alarm

To deactivate the user alarm, follow the above procedure up to step 4. In that step, use the **UP** and **DOWN** buttons to adjust the days of the week settings until no day is selected (see display image).

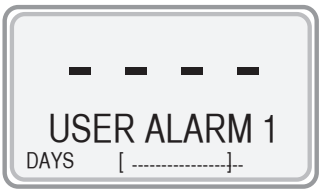

Press the **SCROLL** button to save the new setting and return to the user alarm sub-menu. This deactivates the user alarm completely. When the user alarm is deactivated in this way, the alarm time (hour and minute) is still retained and will be restored when you reactivate the user alarm by selecting one or more days of the week.

9.7 Sleep mode timer

The sleep mode is a very good feature used to quieten the hot tub during your sleep period. When the hot tub is in the sleep mode, neither the automatic heating nor the filtering comes on, yet you can still use the hot tub in the manual regime without having to change settings. You can programme up to 9 different sleep mode times, each of which can occur on one or more specified calendar days. You can use any number of sleep mode intervals.

As the default, the hot tub is set to a sleep mode between 11 pm and 7 am, Monday to Sunday. This is only achieved by applying sleep mode interval no. 1; the other 8 sleep mode intervals are deactivated.

You can view the current sleep mode setting by simply selecting the sleep mode sub-menu from the main menu.

In the sub-menu, use the **UP** and **DOWN** buttons to scroll through each of the nine sleep mode intervals. Each of these intervals consists of a day of the week, a start time and an end time of the sleep mode. These three settings are displayed using the 2 items in the sleep mode sub-menu: "#. **SLEEP START**" and "#. **SLEEP STOP**" (where # is the sleep mode number from 1 to 9).

9.7.1 Configuring the sleep mode

Follow the below procedure to set a currently unused sleep mode interval or adjust an activate interval.

Select the MAIN menu, then press **UP** five times.

Press 5 times

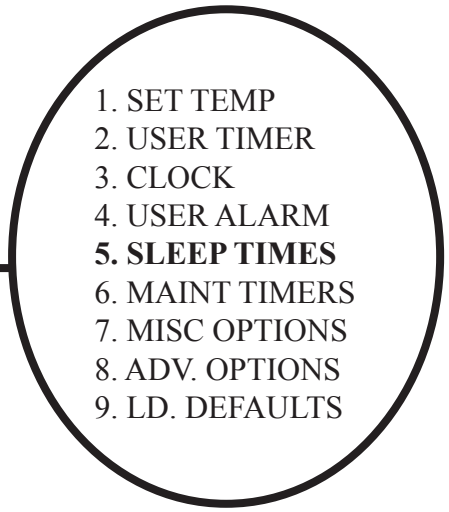

1. Select the **SLEEP TIMES** sub-menu by pressing **SCROLL**.

2. Use the **UP** and **DOWN** buttons to choose the required sleep mode interval.

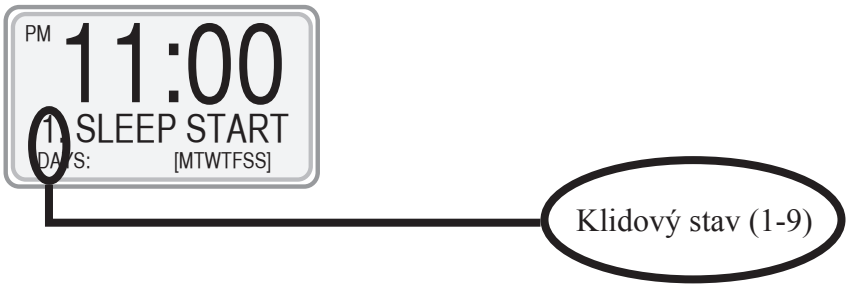

3. Press the **SCROLL** button to start setting the sleep mode start day.

4. Use the **UP** and **DOWN** buttons to choose the required days of the week when the sleep mode should be on. You can choose from 15 different days of the week settings from Monday to Sunday and various combinations of each setting.

5. Press the **SCROLL** button to confirm the current setting and go to the next field.

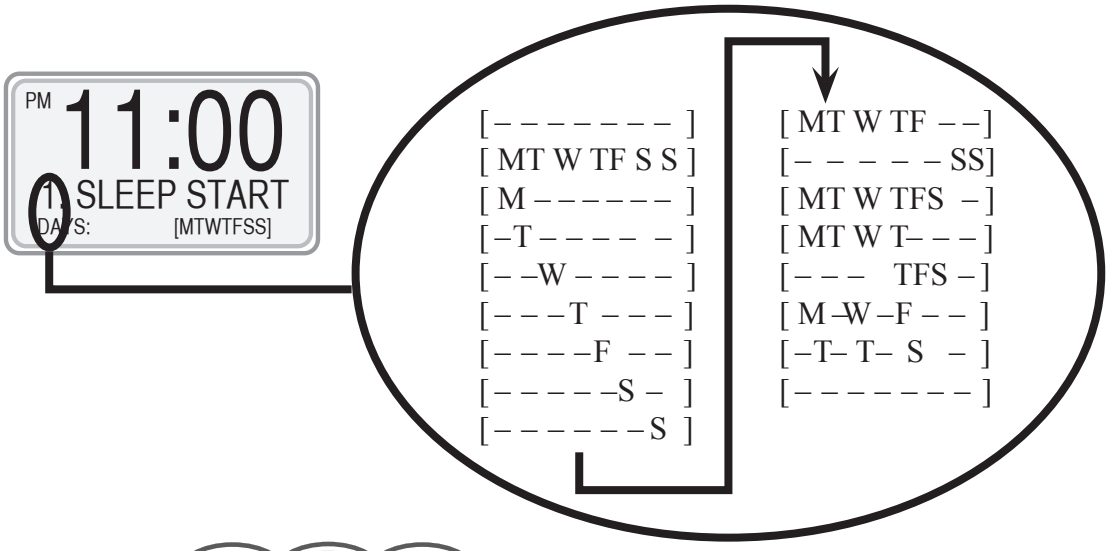

Press **SCROLL** to make the setting.

6. Repeat steps 4 and 5 to set the hours and minutes of the sleep mode start and the hours and minutes of the sleep mode end. Tip: The sleep mode duration hours change as you change the sleep mode end time; use this opportunity to check that your new settings are correct.

Press **SCROLL** to make the setting.

Press **SCROLL** to make the setting.

Press **SCROLL** to make the setting.

Press **SCROLL** to make the setting.

9.7.2 Deactivating the sleep mode period

To deactivate the sleep mode period, follow the instructions in „Configuring the sleep mode“ up to step 4. In that step, use the **UP** and **DOWN** buttons to adjust the days of the week setting until no day is selected (see adjacent image). Press the **SCROLL** button to save the new setting and return to the sleep mode sub-menu. This deactivates the sleep mode period completely.
When the sleep mode period is deactivated, its start time is displayed (see below) and its stop time cannot be selected in the sleep mode sub-menu.

When you deactivate the sleep mode in this way, the start and stop times are retained and will be restored when you reactivate the sleep mode period by choosing one or more days of the week.

9.7.3 Cleaning the pipework

When the system is reactivated after a sleep period, it automatically lets each auxiliary pump run one after another and then the blower for 10 seconds to clean the pipework. This prevents stagnant water from accumulating in the pipes when the hot tub is not in use for longer periods. The display reads „PURGING PUMPS, PLEASE WAIT“ while the pipework cleaning is in progress.

Notes:

1. For the sleep mode to work correctly, check that the clock is set correctly. You will have to set it if the control panel is activated for the first time or has been off for a long time.
2. The maximum length of the sleep mode (uninterrupted) is 23 hours and 59 minutes. This is achieved if the end is set 1 minute before the start. If both the times are identical, the sleep mode will not commence.
3. It is normal that the hot tub runs for a long time after a sleep period to compensate for the overnight temperature loss. Therefore, we advise you configure the hot tub so that is „wakes up“ at least one hour before the intended use.

9.8 Maintenance timers

The hot tub control panel has 9 programmable maintenance cleaners to remind you when it is time for periodical maintenance. Each timer can be configured to elapse after 1 to 255 weeks, or deactivated completely. All 9 timers are deactivated as the default, unless they are set by the manufacturer or installation technician. The first 4 timers have specific names for specific purposes, but the other 5 are general. The hot tub installation technician may have chosen one or more of the programmes set as needed for maintenance items not included in the specific timers. After the time set in the timer is reached, the control panel will inform you thereof in two ways:

1. If the hot tub has not been in use for more than an hour, the first pressing of a button will result in a long beep and displaying of a text indicating which timer has reached its set time. You will have to press the SCROLL button once or repeatedly to clear the message.
2. If you are not in the system menu and the control panel is not active for about 10 seconds, the control panel LCD periodically displays a text indicating which timer has reached its set time. This text is shown in place of the default main display text and does not impede the normal control panel interface.

In either case, the text displayed will read „MAINT REQD:“ and the maintenance timer name.

9.8.1 Configuring the maintenance timer

The installation or servicing technician or the hot tub owner may complete the following table to help keep track of the settings entered into the control panel.

1. General service	Overall maintenance
2. Cabinet service	Switchboard maintenance
3. Replace filter	Filter replacement
4. Ozonator	Ozone generator
5. Custom #1	Up to own choice
6. Custom #2	
7. Custom #3	
8. Custom #4	
9. Custom #5	

9.8.2 Confirming the maintenance timer

When a timer reaches its set time, you have to clear it manually - it will not be cleared automatically. Proceed as indicated below to clear a timer that has reached its set time.

1. Select the MAIN menu, then press **UP** six times.

Press 6 times

1. SET TEMP
2. USER TIMER
3. CLOCK
4. USER ALARM
5. SLEEP TIMES
6. MAINT TIMERS
7. MISC OPTIONS
8. ADV. OPTIONS
9. LD. DEFAULTS

2. Press **SCROLL** and then **UP** as needed to select the maintenance timer to clear.

1. GENERAL SRVC
2. CABINET SRVC
3. REPLACE FLTR
4. OZONATOR
5. CUSTOM #1
6. CUSTOM #2
7. CUSTOM #3
8. CUSTOM #4
9. CUSTOM #5

Press **SCROLL** to make the setting.

3. Press the **SCROLL** button to start adjusting the timer options.

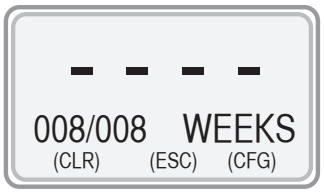

4. Press **DOWN** to reset the number of weeks to zero.

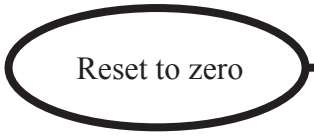

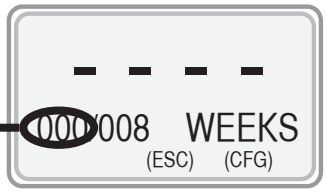

5. Press the **SCROLL** button to confirm and go to the next field.

9.8.3 Configuring the maintenance timer

Follow the below procedure to change the total number of weeks or the number of weeks elapsed in the relevant maintenance job timer:

1. Select the sub-menu **MAINT TIMERS**.
2. Press **UP** or **DOWN** to select the required maintenance timer.
3. Press **SCROLL** once to display the maintenance timer options.
4. Press **UP** once to begin configuring the timer. The Total Weeks field starts to flash.
5. Use the **UP** and **DOWN** buttons to set the highlighted field as needed. Hold either of the two buttons down to automatically repeat the pressing.
6. Press the **SCROLL** button to confirm the current setting and go to the next field.
7. Repeat steps 5 and 6 to set the number of weeks elapsed. In most cases, you will want to leave this field at 0 - beginning of the countdown period.
8. Press **SCROLL** once to return to the maintenance timer sub-menu.

9.8.4 Deactivating the maintenance timer

To deactivate the maintenance timer, follow the above procedure up to step 5. In that step, hold down the DOWN button until the Total Weeks field turns to 0. Then press SCROLL once to save the new setting and return to the maintenance timer options screen. This deactivates the maintenance timer completely.

Notes:

1. Timers of the lowest number are of the highest priority and are the first displayed if two or more timers reach the set time simultaneously. After the first maintenance timer is cleared, the control panel reports that the next-highest priority timer has reached its set time.
2. The maintenance timers will not count down when the control panel is off.

9.9 Key clicks (on/off)

The control panel can be set to beep whenever a button is pressed (a beep for every click of the keys); this can be activated and deactivated as needed following the below procedure.

1. Select the **MISC OPTIONS** sub-menu from the main menu.
2. Select the menu item **KEY CLICKS**.
3. Press the **SCROLL** button.
4. Use the **UP** and **DOWN** buttons to switch on and off.
5. Press **SCROLL** to make the setting.

Note: Deactivating key clicks does not turn down timer beeps etc.

9.9.1 Main display

The hot tub LCD display comprises four digits and two rows of text. The display normally shows three figures: the hot tub temperature, the set hot tub temperature, and the time information (day of the week and time). As the default, the current hot tub temperature is shown in the digits and the time and the set temperature are in the two rows of text. If the user prefers a different arrangement, this configuration can be changed so that the main display either shows the set temperature or the clock (4 digits) instead of the smaller text rows. In addition, you can choose a cycling mode, with each of the three available displays shown for 10 seconds. **Available options:**

POOL TEMP	the default setting; set temperature and clock in the text rows
SET TEMP	clock and hot tub temperature in the text rows
CLOCK	set temperature and hot tub temperature in the text rows
CYCLING	above settings 1-3 alternating periodically for 10 seconds each

9.9.2 Changing the main display

1. Select the **MISC OPTIONS** sub-menu from the main menu.
2. Select the menu item **MAIN DISPLAY**.
3. Press the **SCROLL** button to start choosing the heating control settings (see table).
4. Use the **UP** and **DOWN** buttons to set the heating setting.
5. Press the **SCROLL** button to confirm the current setting and return to the **MISC OPTIONS** sub-menu.

9.9.3 Colour and brightness of the panel light

The user can change the colour and brightness of the display backlighting to a setting of the user‘s choice. Remember that these manual settings will only work either when the hot tub light is off or when the panel and pool light synchronisation feature is deactivated.

9.9.4 Changing the control panel backlighting colour

1. Select the **MISC OPTIONS** sub-menu from the main menu.
2. Select the menu item **PANEL LIGHT COLOUR**.
3. Press the **SCROLL** button to start choosing the light colour.
4. Use the **UP** and **DOWN** buttons to set the required colour.
5. Press the **SCROLL** button to confirm the current setting and return to the **MISC OPTIONS** sub-menu.

9.9.5 Changing the control panel backlighting brightness

1. Select the **MISC OPTIONS** sub-menu from the main menu.
2. Select the menu item **PANEL LIGHT INTENSITY**.
3. Press the **SCROLL** button to start adjusting the light brightness.
4. Use the **UP** and **DOWN** buttons to set the required brightness.
5. Press the **SCROLL** button to confirm the current setting and return to the **MISC OPTIONS** sub-menu.

Note that the backlighting brightness setting only works while the hot tub is in use. The backlighting brightness reverts automatically to the default setting of 34% after 90 minutes of not using the control panel (no button pressed). The reason for this is to ensure the long life of the backlighting diodes. As soon as you press a button on the control panel, the default factory setting is restored.

9.9.6 Synchronisation of panel and hot tub lighting (on/off)

The control panel backlighting can reflect the colour and brightness of the Spa Power Variable Colour Light (SPVCL) inner hot tub lighting. This feature is the most noticeable when the light effect mode is applied and the light colours alternate quickly.
When the light inside the hot tub is off, the display backlighting stays the colour selected by the user. If you wish to, you can deactivate the synchronisation/reflection feature and the control panel will permanently be the same colour even when the light in the tub is on.

9.9.7 Activating/deactivating lighting synchronisation

1. Select the **MISC OPTIONS** sub-menu from the main menu.
2. Select the menu item **PANEL & POOL LT**. **SYNC**
3. Press the **SCROLL** button to change the light synchronisation setting.
4. Use the **UP** and **DOWN** buttons to switch on and off.
5. Press **SCROLL** to make the setting.

Note: This option is only active if the hot tub has a SPVCL (Spa Power Variable Colour Light).

9.10 Advanced options sub-menu

The advanced options sub-menu contains settings that you should only change after you are well familiar with the basic features of your hot tub. In principle, the default settings will be satisfactory and there will probably be no need to change them.

Select the **MAIN** menu, then press **UP** eight times.

Press 8 times

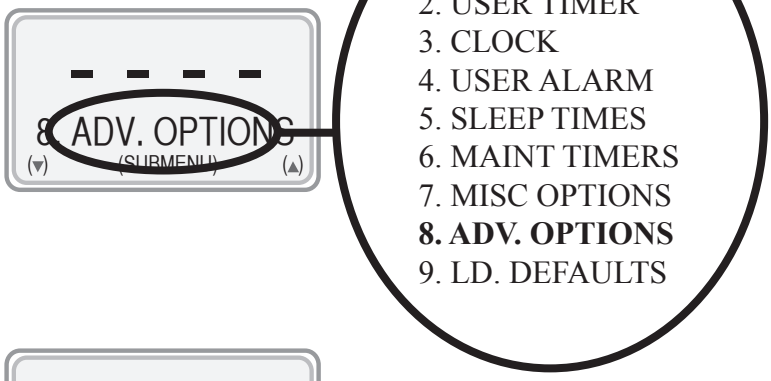

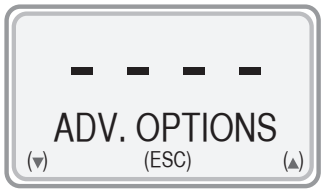

Press **SCROLL** to make the setting.

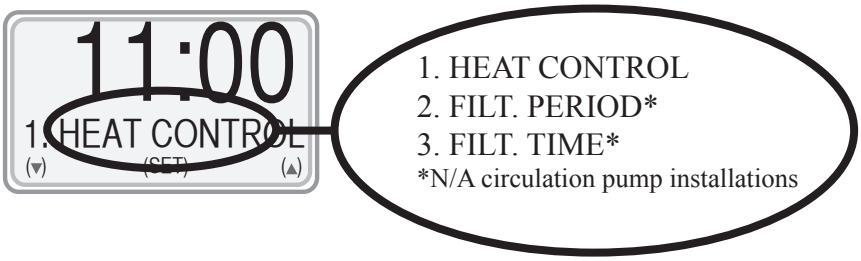

9.10.1 Heating controls/management

In addition to the temperature settings, the user may choose one of the four heating control settings. The set temperature defines the maximum temperature before the hot tub turns off the heater, while the heating control setting defines how deep down the temperature has to drop before the heater comes on again. In other words, the heating control setting defines how close to the set temperature the hot tub maintains the water temperature. **The four setting options are as follows:**

TIGHT	0,25	2,50
NORMAL (default setting)	0,50	3,00
LOOSE	0,75	3,50
EXTRA LOOSE	1,00	4,00

The figures shown in the table for each of the settings indicate the actual temperature drop in the hot tub below the set point for the heater to come on. The two columns of figures are arranged as follows: 0.25-1.00 and 2.50-4.00. The first column is applied in general. There is a direct connection between how often the hot tub switches off and on and how close to the set temperature the actual temperature is maintained. If you chose the TIGHT setting, you will maintain the temperature very close to the set temperature but this also means that the hot tub will often switch off and on. In contrast, if you choose the EXTRA LOOSE setting, it will entail a much broader deviation in the water temperature, but the hot tub will switch off and on much less often. Determining accurately how often the hot tub will switch on and off in each of the settings is a complex function of ambient conditions and the hot tub thermal characteristics: the set temperature, the tub insulation, the thermal cover insulation, the heating capacity, etc. We advise you start with the default NORMAL setting and change to a different setting only if you find you prefer a different connection between the cycle frequency and the temperature deviation.

9.10.2 Changing the heating control setting

1. Select the ADV. OPTIONS sub-menu from the main menu.
2. Select the menu item HEAT CONTROL.
3. Press the SCROLL button to start choosing the heating control settings.
4. Use the UP and DOWN buttons to set the heating setting (see table).
5. Press the SCROLL button to confirm the current setting and return to the ADV. OPTIONS sub-menu.

Notes:

1. When the hot tub is in use, the heating is reduced automatically to no more than 0.5°C to ensure the water does not run cold too fast.
2. The start of the filtration cycle always activates the heater if the temperature is below the set point, regardless of the heating control setting.

9.10.3 Automatic filtration/disinfection

Automatic filtration is designed to ensure that the water in the hot tub is filtered for at least a minimum period of time every day, regardless of how often the hot tub is used or for how long the pump runs to maintain the temperature. If the pump has not run long enough during normal operation, the system will automatically let it run for the additional required period of time to observe the user-defined minimum filtering time. This feature is of special utility in warmer climates, where very little automatic water heating (thus filtering) is needed to maintain the set water temperature.
The automatic filtration has two user-adjustable settings: the filtration time and the filtration frequency. These settings are found in the advanced options sub-menu.

9.10.4 Adjusting the filtration time

Filtration time adjustments define the minimum filtering time and can be set to between 0 and 30 minutes per hour (effectively 0 to 12 hours a day); the default is 10 minutes. The 0 minutes setting completely deactivates automatic filtration.

1. Select the sub-menu **ADV. OPTIONS** from the main menu.
2. Select the menu item **FILT**. **TIME**.
3. Press the **SCROLL** button to start altering the filtration time.
4. Use the **UP** and **DOWN** buttons to set the required filtration time in minutes per hour.
5. Press the **SCROLL** button to confirm the current setting and return to the **ADV. OPTIONS** sub-menu.

9.10.5 Adjusting the filtration frequency

Adjust the filtration frequency for how often the system should let the pump run to ensure observance of the minimum filtration time. The available settings are 1, 2, 3, and 4 hours. With the 1 hour default setting, the pump is activated no more than once an hour to ensure that the filtration times are observed; analogously, the 4-hour setting means the filtration will take place once every 4 hours.

1. Select the **ADV. OPTIONS** sub-menu from the main menu.
2. Select the menu item **FILT**. **PERIOD**.
3. Press the **SCROLL** button to start altering the filtration frequency.
4. Use the **UP** and **DOWN** buttons to set the required filtration frequency.
5. Press the **SCROLL** button to confirm the current setting and return to the **ADV. OPTIONS** sub-menu.

Note that even though the filtration frequency limits how often the filtration itself is activated, normal heating (temperature maintenance) may occur in between the filtering periods. If this happens, it may seem as if the filtration frequency setting does not work correctly, but this is the normal performance. Excessive repetition of the hot tub cycle will not be eliminated by reducing the filtration frequency; read „Heating controls/management“ for more information.

Notes:

1. The ambient temperature is different every day in the year. As a result, the hot tub pump will run for different periods of time in different parts of the day, differently each day, depending on how often the pump runs to warm the water.
2. Any modifications to the filtration settings (either time or frequency) will reset the current filtration timing and the automatic filtration will not resume sooner than on the 1st hour of the next filtration period.
3. The filtration cycles always activate the heating if the hot tub water temperature is below the temperature setting, regardless of the heating setting mode.
4. The filtration does not work when the system is in the sleep mode.

9.11 Factory settings

The Factory settings option allows you to restore all the default factory settings. They include parameters such as set temperature and sleep periods as well as the preferred light mode settings, light effects and blower speed, which will be restored to their defaults as preset by the manufacturer. Only use this option when you are absolutely sure that it is necessary.

1. Select the item **LD**. **DEFAULTS** from the main menu (see below for details).
2. Press the **SCROLL** button. Note that the confirmation period is very short (about 3 seconds), so you will have to perform the following steps relatively quickly.
3. Press the **UP** or **DOWN** button to highlight „YES“.
4. Press the **SCROLL** button to load the default settings. The display will read „**DEFAULTS LOADED**“ temporarily to confirm that the default values have been loaded.
5. Select the **MAIN** menu, then press **UP** nine times.

3. The filtration cycles always activate the heating if the hot tub water temperature is below the temperature setting, regardless of the heating setting mode.
4. The filtration does not work when the system is in the sleep mode.

Press 9 times

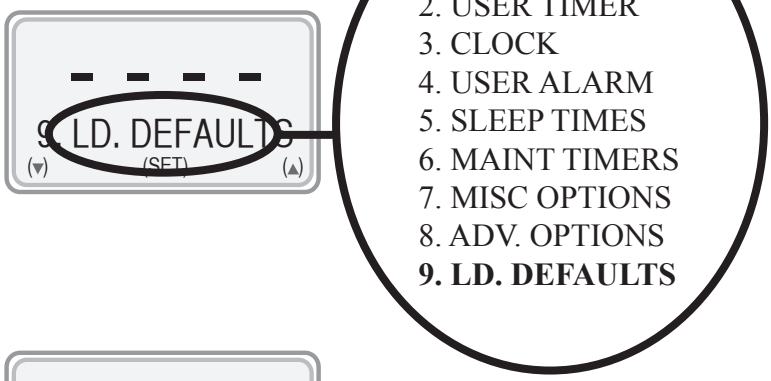

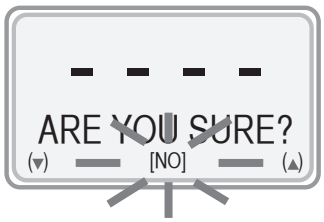

Pro nastavení stiskněte **SCROLL**

Notes:

1. After applying the default settings, which takes about 10 seconds, the control panel saves them. Do not disconnect the power supply during that period.
2. The hours, minutes and day of the week in the clock are reset after applying the default settings.

10. Additional Features

10.1 Control panel key lock

The hot tub control panel buttons can be locked to prevent unauthorised persons from using the hot tub or changing the settings. When the key lock is active, any pressing of the buttons is ignored but the LCD display shows „**KEYS LOCKED**“ temporarily to inform the user that the key lock has been activated.

10.2 Activating the key lock

To activate the key lock, hold down the **DOWN**, **SCROLL** and **UP** buttons simultaneously. While doing so, the LCD display will read „**HOLD KEYS TO ACTIVATE LOCK**“. You will have to hold the keys down for about 3 seconds to activate the key lock. Then the control panel beeps and reads „**KEYS LOCKED**“.

10.3 Deactivating the key lock

Once the key lock is activated, the buttons have to be pressed in sequence in order to deactivate it. Press the buttons in the sequence shown, one at a time.

The control panel beeps and reads „**KEYS UNLOCKED**“ temporarily once the buttons are pressed in the correct order.

If you remember which button you pressed last, or if you press one of the buttons incorrectly, please start again.

The unlocking sequence: **DOWN, SCROLL, DOWN, UP, SCROLL**.

Note:
If the control panel is off while the key lock is active, the key lock is not resumed after the control panel is switched on again.

Press once

Press twice

Press 3 times

Press 4 times

Press 5 times

10.4 Adjusting the control panel display contrast

The control panel display contrast/brightness can be adjusted manually if the display seems too dark or too bright.

Follow the below procedure to adjust contrast:

1. Hold down the **LIGHT** button. The light will be as bright as always, but you have to hold the button down before you proceed to the next steps.
2. While still holding down the **LIGHT** button, press **UP** or **DOWN** to brighten or darken the contrast as needed. Hold one of the buttons down to automatically repeat the pressing.
3. When you have finished adjusting the contrast, release the **LIGHT** button and the new setting will be saved.

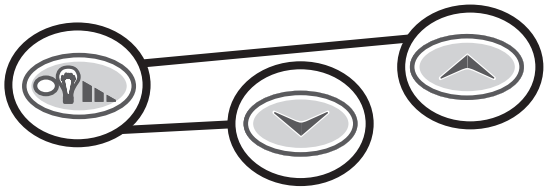

10.5 Reversing the display

The display can be reversed so that it can be read from both inside and outside the tub; the display reverts to the default mode after 30 minutes of inactivity. To reverse the display, press the **UP** and **DOWN** buttons simultaneously.
To revert the display to the original facing, press **UP** and **DOWN** again.

Default display facing

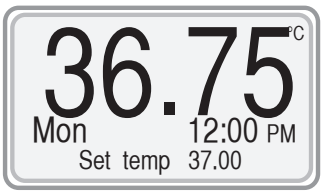

Reverse display facing

10.6 Language selection

The hot tub control panel can display English (default), French, German, Spanish, Dutch, and Japanese.

To select your language, hold down the **DOWN** button for 4 seconds.

Choose the language by pressing **UP** or **DOWN**; make the setting by pressing **SCROLL**.
Press **SCROLL** to save the setting.

Press **SCROLL** to make the setting.

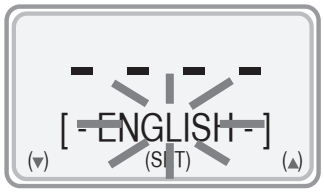

11. Radio with DVD

A. Properties

- waterproof appliance
- remote control option
- advanced technology
- low power input, long service life

B. Safety instructions

1. When it is too cold, the disc and the optical components may fog up and not work properly. Please wipe the disc with a soft cloth. Fogged up optical components will return to their original condition naturally if you leave them in a warmer place for about an hour.
2. the appliance employs precision mechanics. In the event of any trouble, never open the housing, disassemble the appliance or grease rotating parts.

3. Open control panel

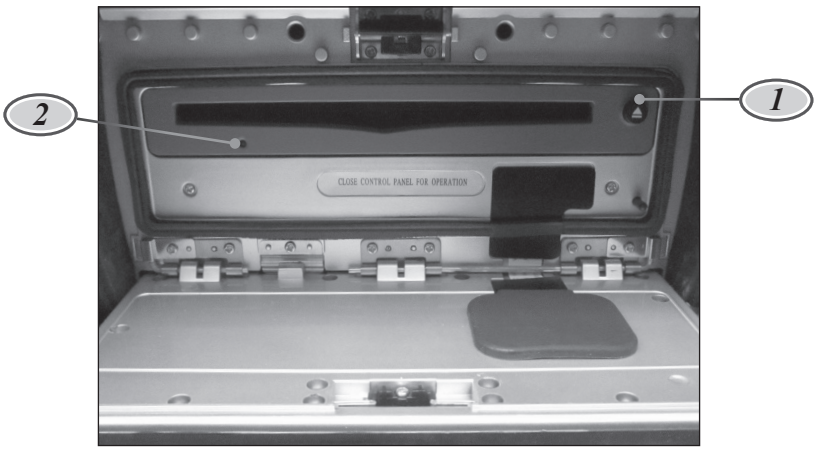

1. OPEN**button**
2. RESET**button**

RESET
The RESET button should be used in the following cases:

- on first startup, when all the cables have been connected, or after battery replacement
- if the functional buttons do not work
- the display reads ERROR

To press **RESET** use a ball-point pen or a thin metal object

Caution:
When opening and closing the front panel, take care not to catch your fingers.
1. Only use the appliance when the front panel is closed.
2. Do not close or open the panel with abnormal force.
3. If the front panel is open, do not use it as a place for putting things.
4. When closing the front panel, do not push OPEN.
5. Pushing the control or display buttons with great force may damage them.
6. If the front panel does not open fully, open it gently by hand.

C. Description of buttons and features

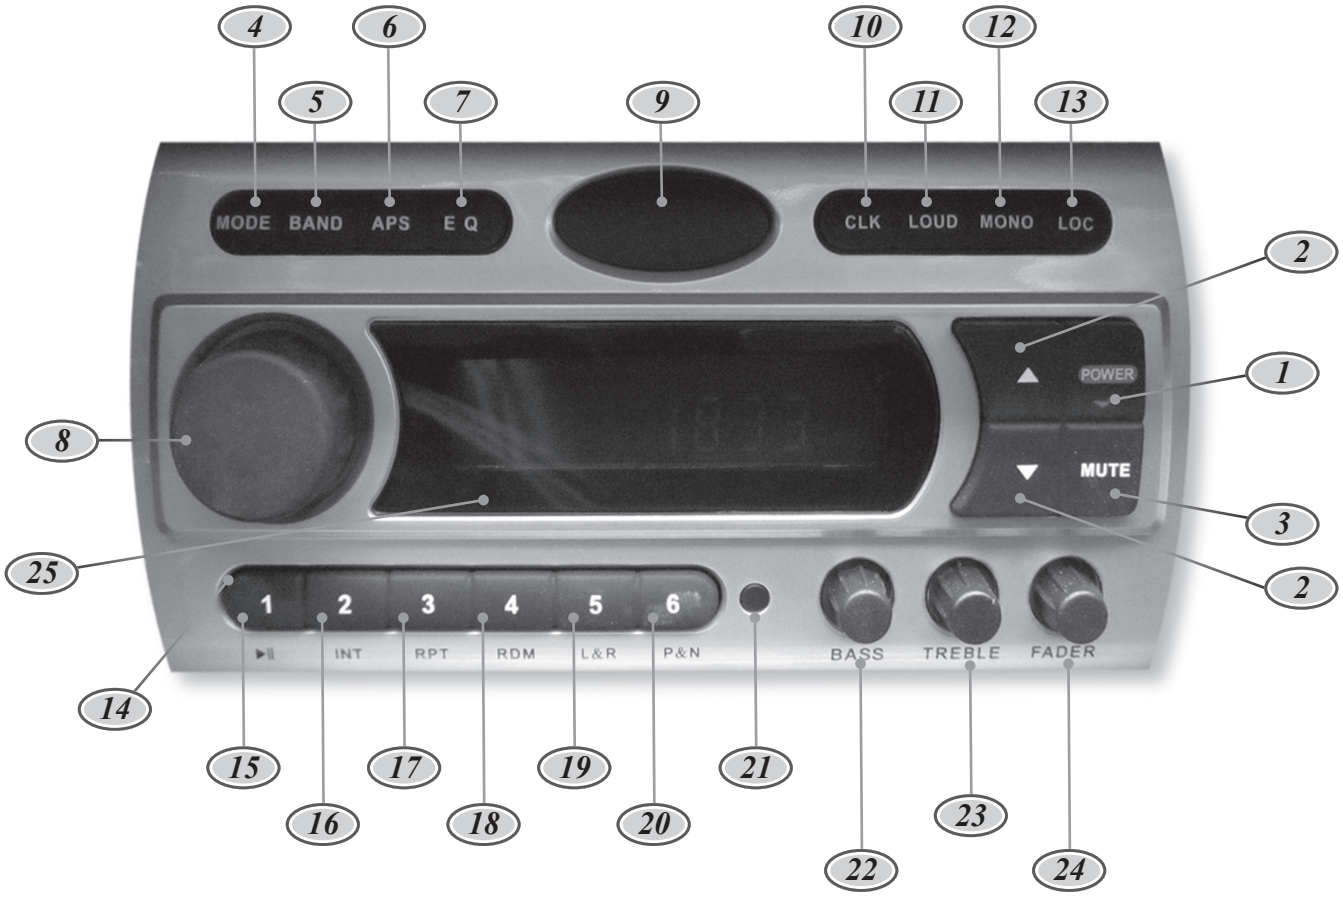

1. POWER button
Press the button to turn the appliance on and off.

2. ▲▼ up/down arrows
In the Radio mode, push these buttons to select a radio station. In the CD/MP3 Playback mode, push these buttons to select a track. The buttons are programmable. If you hold the button down for 3 seconds, the CD/MP3 will fast forward/rewind; in the Radio mode, it will tune in the first station with a strong enough reception.

3. MUTE button
Push this button briefly to mute the volume; push it again to set the former volume, or adjust it using the button VOL.

4. MODE button
Push the MODE button to switch between modes.

5. BAND button
In the Radio mode, this button circles through FM1 - FM2 - FM3 - AM1 - AM2. Push the button during normal playback to change the mode.

6. APS button
Push the APS button to start scanning each stored station for 5 seconds. Push the button again to listen to the currently playing station. Hold down the APS button to activate station storing. The radio will choose a station automatically and store it in its memory.

7. EQ (equalizer) button
The letters “EQ” are shown on the display when the equalizer is enabled. The Equalizer mode gives you perfect sound quality. Push the button to circle through the following setting:
EQ OFF → FLRT → CLRSS (classic) → ROCK → POPS (pop) → CUST (custom)

8. VOLUME button
Turn the VOLUME wheel to set the required volume during playback. Push the VOLUME button to select from VOL (volume), BAS, TRE, BAL, FAD.

9. OPEN button
Push this button to open the front panel; the volume is muted.

10. CLK (clock) button
Push this button to display the current time. Push it again to hide the time display; alternatively, the display goes back automatically after 5 seconds. Hold down the CLK button; the colon in the time display stops blinking: turn the VOLUME button to set the hours and minutes.

11. LOUD button)
Push it to enable or disable the Loud feature. When enabled, the display reads LOUD.

12. MONO button
Use this button to switch between MONO and STEREO in the Radio mode.

13. LOC button
Push this to choose between pickup from a local or distant transmitter.

14. 1 - 6 numeric buttons
These are enabled in the Radio mode. The buttons are used for storing and selecting a stored station.

15. PLAY/PAUSE button
Hold down this button for 1 second or more to start or pause playback.

16. INT button
Push this button during playback to display information about the track.

17. RPT (repeat) button
Push this button for repeated playback. Push it again to disable the feature.

18. RDM (random) button
Push RDM during playback: the display will read RDM and the appliance will start playing a randomly chosen track.

19. L&R button
Push this button during VCD/DVD playback to switch between the right and left speaker.

20. P&N button
Switches between audio and video.

21. IR receiver
The remote control signal receiver (the working angle is 30° in every direction)

22. BASS control
Turn the control clockwise or counter-clockwise to adjust the bass.

23. TREBLE control
Turn the control clockwise or counter-clockwise to adjust the treble.

24. FADER control
Turn the control clockwise or counter-clockwise to adjust the fader.

25. LCD
LCD display

Display
The motion on the display may slow down and the image may become dim in extreme cold. The display functionality will return to normal as soon as it is moved to a warmer place.

D. Radio controls

1. Mode

When the Radio mode is activated, FM radio starts playing; push the MODE button to change the station.

2. Band selection

Push the BAND button to circle through the bands FM1/FM2/FM3/AM1/AM2.

3. Manual/automatic tuning

Push ▼▲ to search for a station. Hold down the button to do an automatic search for stations with a strong reception. (Do not use the automatic tuning feature if the reception is poor.)

4. Automatic storing/scanning (APS)

● Automatic storing

Choose a band and hold down the APS button for more than 3 seconds. This will automatically store 6 stations with the best reception. New stations will be stored instead of the previously stored ones in this band.

●Scanning

Choose a band and push the APS button to start scanning the stored stations in the band. The appliance will play each of the stored stations for 5 seconds. Push APS again to cancel the scan.

5. Preset stations

You can store up to 6 stations in each band under the six buttons marked 1-6. Choose a band, then choose a station, and push the numbered button of your choice for 2 seconds to store the station. When the station is stored, the display shows the number of the button under which the station is stored. To play a stored station, choose a band and then push the numbered button for the station you wish to hear.

6. Local/distant transmitter

Stations are normally received in stereo, which is marked with the “ST” icon on the display. However, if the reception is poor or disturbed, you can push LOC to enable the local transmitter feature; its carrier will be stronger and thus the reception better. Push LOC again to disable this feature.

E. DVD, VCD, MP4, MP3, CD controls

1. To listen to (or watch) a DVD, VCD, MP4, MP3 or CD,

simply insert the disc into the CD compartment (printed side up). The drive will start automatically after the disc is loaded, and show a menu on the display.

2. Track selection

Push ▼▲to choose your favourite track. Hold down the button to scan the track quickly.

3. Repeated track playback

If you want to replay your favourite track, push the RPT button. Push the RPT button once to replay the same track. The display will show RPT. Push it again to disable the track replay feature.

4. Automatic track scanning

Push the INT button during playback to hear 10 seconds of each of the tracks on the disc. The display will read INT, the track number and the time played. Push the button again to return to normal playback.

5. Playing tracks in random order

Push the RDM button during playback: the display will read RDM and the tracks will be played in a random order. Push RDM again to return to normal playback.

6. Pausing the playback

Push the ▼▲ button during playback to pause the playback. Push the button again to resume the playback.

F. Remote control battery replacement

If the remote control range decreases or if it stops working altogether, the batteries need to be replaced (CR2025 type). Make sure the batteries are inserted correctly following the instructions below.

1. Push the lock to pull out the battery bracket.
2. Insert a battery in the battery bracket with the positive polarity (+) facing upwards.
3. Reinsert the battery bracket in the remote control.

G. DVD Remote control description

1. Switch on
2. Pause/Play
3. Mute
4. Menu
5. Band/System
6. In
7. Volume
8. Tune/Track select/Quick scanning
9. Program playback
10. Display
11. Sound settings
12. Repeated playback
13. Random playback
14. Numeric buttons
15. Audio settings
16. Scene selection menu (PBC menu)
17. Subtitle settings
18. Playback time settings
19. Mode switch
20. Stop/Replay
21. Angle settings
22. Slow playback
23. Setup
24. Invoke menu
25. Magnification settings

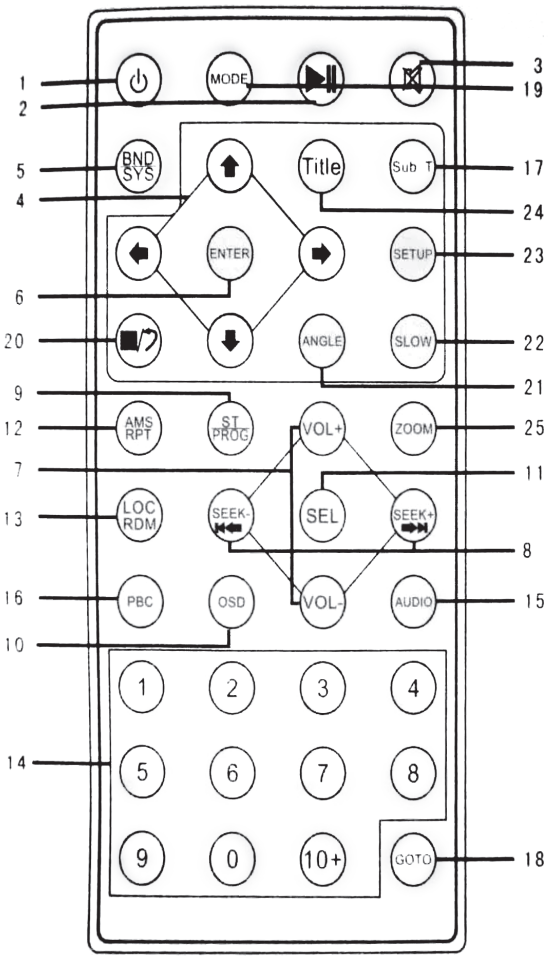

H. Wiring diagram

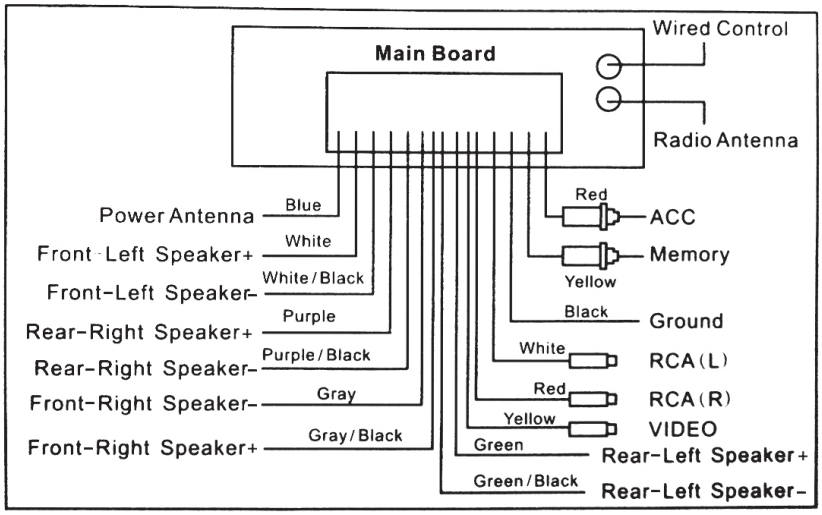

Main board
Control cord
Radio aerial
Aerial power supply
Blue
White
Front left speaker+
Rear right speaker +
Purple
Purple-Black
Gray
Gray-Black
Red
Yellow
ACC
Memory
Ground
Black
White
RCA (L) = Cinch connector (left)
RCA (R) = Cinch connector (right)
Green
Green-Black
Rear left speaker

I. Troubleshooting

Problem	Solution
No power supply	Check to see if a fuse has blown. Replace the fuse if necessary.
The LCD panel reads ERROR or there is no response to a button push.	Press the RESET button.
Stations cannot be tuned.	Check to make sure that the aerial is connected; connect it if it is not.
Poor reception	The aerial is too short. Check whether the aerial cable is damaged; replace it if necessary. If the reception is poor, the aerial grounding is probably insufficient; check the aerial grounding.
CD will not load	Is there a CD in the drive?
Stereo indicator flashes	Adjust the frequency exactly; the transmission is too poor, switch to MONO reception.
No image	Is the video cable connected correctly to the TV receiver?
Image noise	Wrong colour system selected. Choose the PAL or NTSC system. The CD is dirty or damaged.

12. LCD TV

The hot tub comes with a 17” LCD TV with remote control. The TV is located in the hot tub frame and connected to a telescopic bracket.

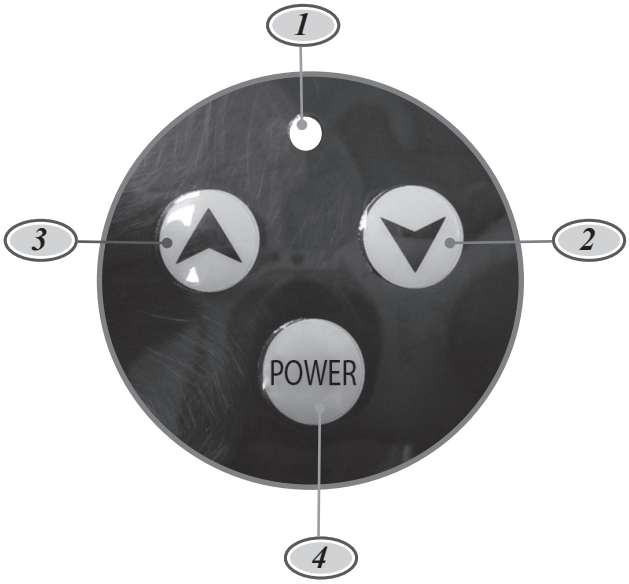

A. Telescopic bracket control panel

1. LED diode
2. TV retractor button
3. TV telescope button
4. TV and telescopic bracket on/off button

B. Front view of the TV

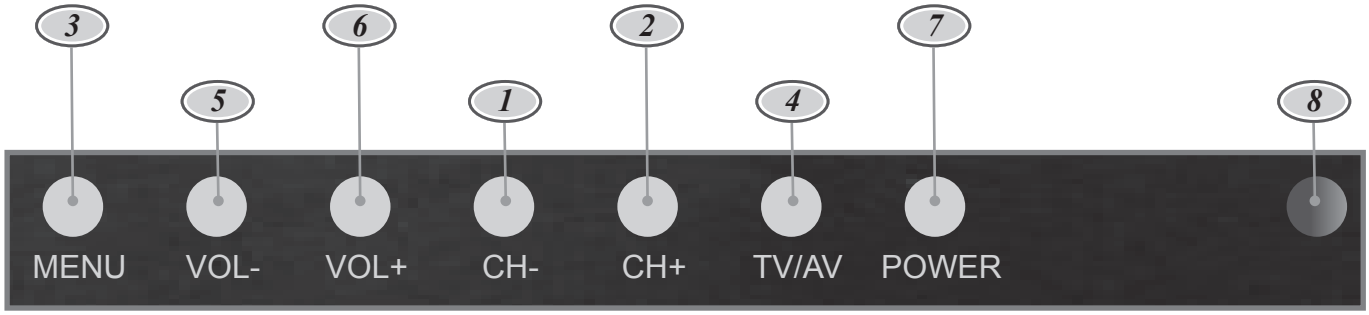

1. CH button- (down channel control)

2. CH+ button/SELECT button (up channel control/selection button)

3. MENU button

4. TV/AV button (PC/Audio Video connector)

5. VOL-/LEFT button(volume down/move left button)

6. VOL+/RIGHT button(volume up/move right button)

7. POWER - ON/OFF button (switch on/off)

8. Standby LED diode

C. Turning on/off the TV

To turn on: Push the ON button: the diode on the TV turns red and the TV is in the standby mode. Push the ON/OFF button on the remote control: the diode on the TV turns blue and the image comes on a few seconds later.

To turn off: Push the ON/OFF button on the remote control to switch the TV into the standby mode.

D. Inserting batteries in the remote control

Battery replacement: If the remote control range decreases or if it stops working altogether, the batteries need to be replaced (CR2025 type). Make sure the batteries are inserted correctly following the instructions below.

1. Use the enclosed key to turn the battery lid to OPEN.
2. Insert a battery in the battery bracket with the positive polarity (+) facing upwards.
3. Close the lid and turn it to CLOSE.

Cautions when using the remote control

- Do not throw the remote control.
- Do not subject the remote control to physical shocks.
- Keep the remote control dry. Moisture may render it useless.
- If the controlling becomes less easy, replace the batteries.
- Remove the batteries from the remote control if you are not going to use the TV for some time.

E. Rear view of the TV

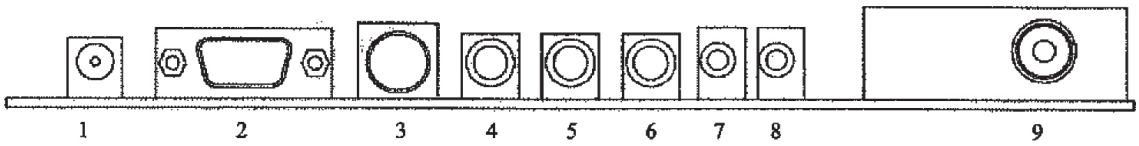

1. Power cable inlet
2. VGA input (TV can be used as a PC screen)
3. S-VIDEO input
4. CVBS format input (formats such as NTSC, PAL)
5. AUDIO input - left
6. AUDIO input - right
7. PC AUDIO input
8. Headphone output
9. TV aerial output

F. TV remote control description

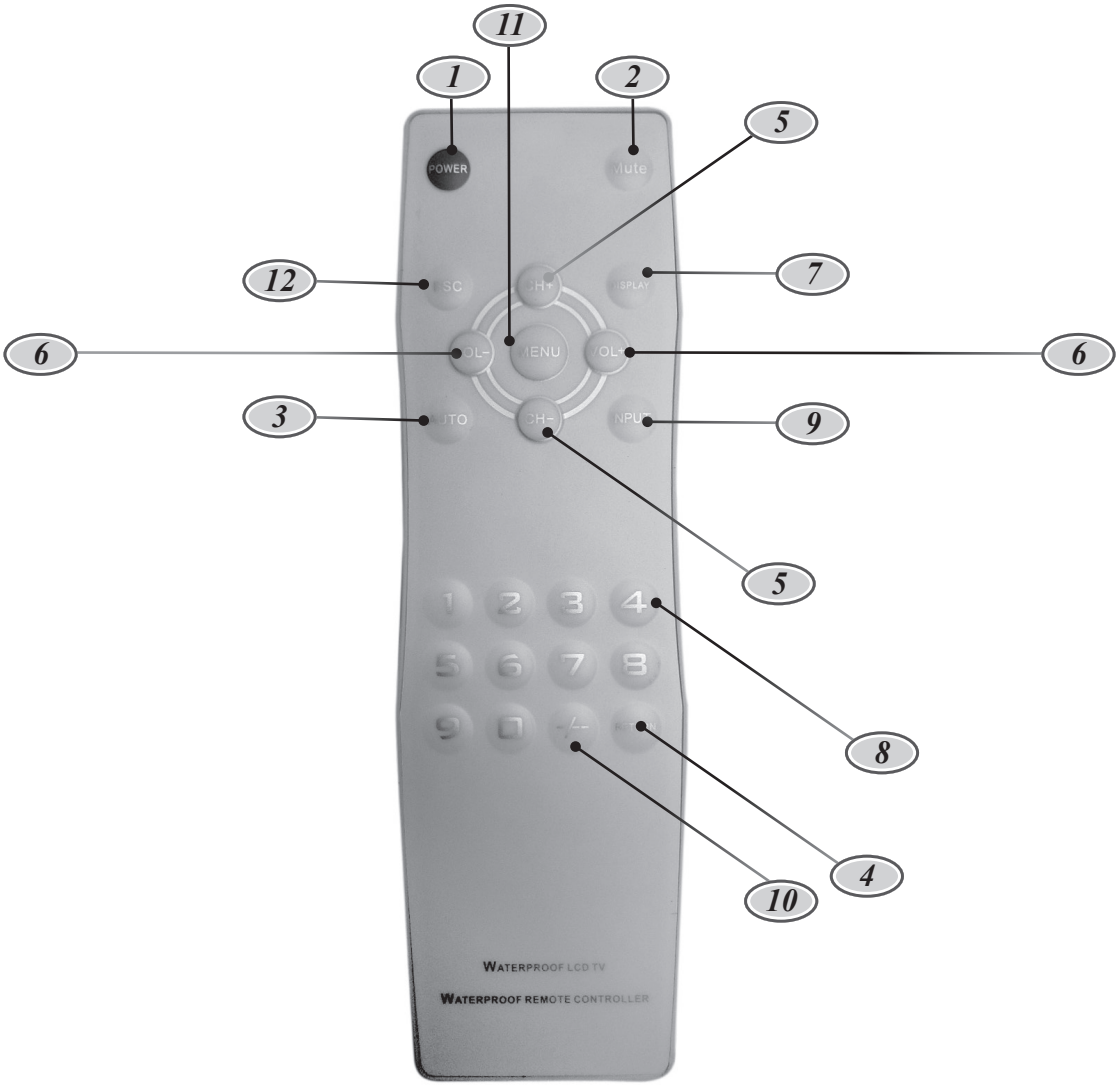

1. POWER button
Push this button to switch the TV to the standby mode.

2. MUTE button
Push the mute button to mute or resume the sound.

3. AUTO button
Push this button for automatic image adjustment mode.

4. RETURN button
Use it to return to the previously watched station.

5. CH▲ and CH▼ button
Chooses channels up and down.

6. VOL▲ and VOL▼ button
Push these buttons to adjust the volume up or down.

7. DISPLAY (invoke settings) button
Push this button to invoke the screen settings (such as channel and TV input number).

8. Channel selection button
Push this button to select a desired channel.

9. INPUT button
Push this button to circle through TV transmission, Audio-Video input, Super Video input, and other inputs.

10. -/-- button
Channel number selection.

11. MENU button
Push this button to activate and deactivate the on-screen menu.

12. ESC (back) button
Push this button to return to the TV settings menu.

SCREEN MENU

The TV makes it possible to choose settings by selecting from an on-screen menu through the MENU button.

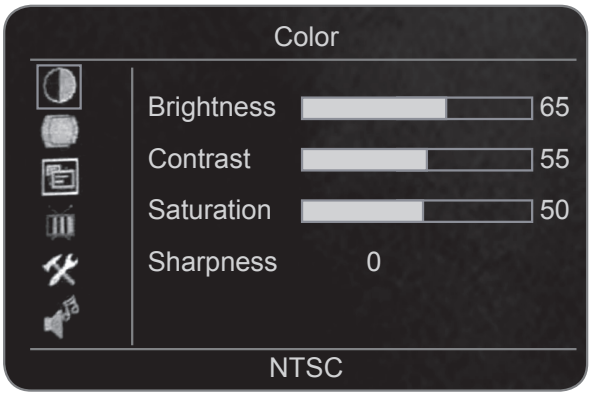

Push the MENU button in the TV mode to display the main menu, including colour options, local settings, TV, feature and sound options. Choose an item by pushing CH+/CH-, and enter the submenus by pushing ▲+/-. The selected item will be highlighted.

COLOR MENU

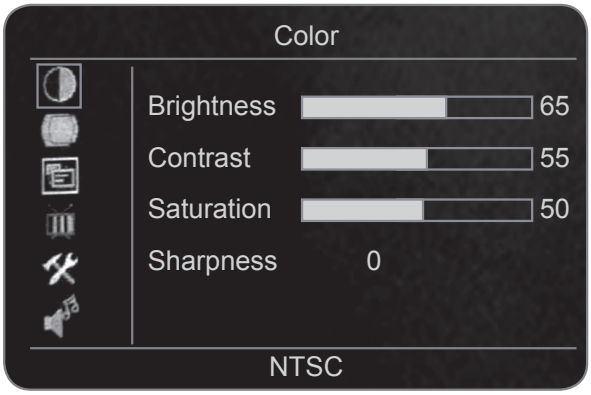

Enter the COLOR menu to choose from Image mode, Brightness, Contrast, Saturation, and Sharpness. Make your choice by pushing CH+/CH-. Adjust the item by pushing ▲+/-.

LOCAL SETTINGS MENU

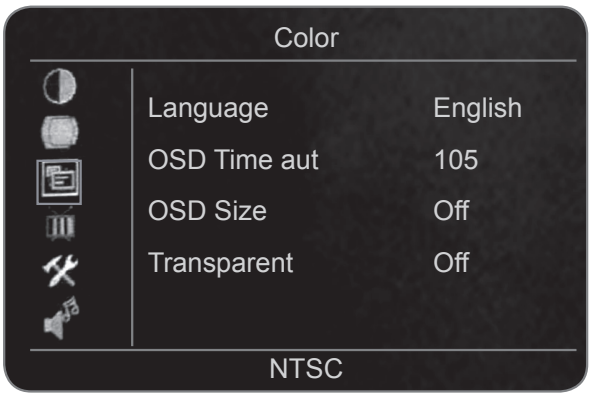

Enter the OSD (local settings) menu to choose Language, Timer, Size, and Transparency settings. Make your choice by pushing CH+/CH-. Adjust the item by pushing ▲+/-.
In Language, choose your local language by pushing ▲+/-.

FEATURE MENU

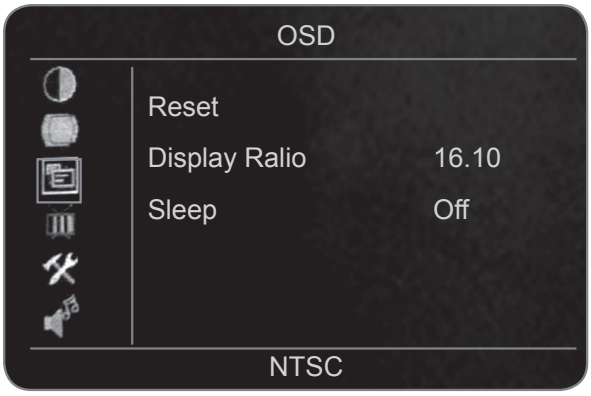

Enter the feature menu to make adjustments to the Reset, Display side ratio, and Sleep mode. Make your choice by pushing CH+/CH-. Adjust the item by pushing ▲+/-.

SOUND MENU

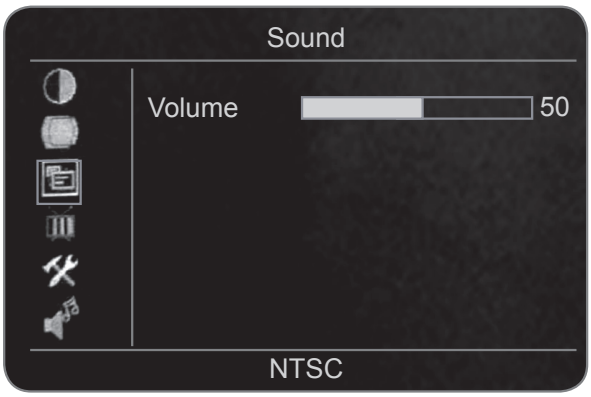

Enter the Sound menu. Adjust the item by pushing ▲+/-.

TV MENU

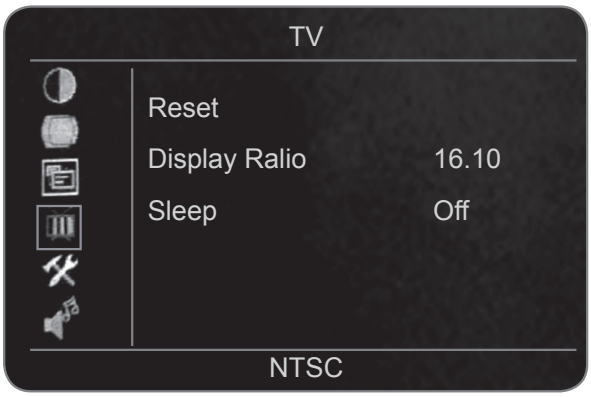

Here, you can make adjustments to Channel, System, Automatic scanning, Manual scanning, Tuning, and Skipping. Make your choice by pushing CH+/CH-.

1. Automatic scanning
Push ▲+/- to start automatic scanning from V-L to UHF (TV frequencies); each station found will be stored automatically.

2. Manual scanning
Push ▲+/- and then use ▲+ and ▲- to move up or down through the frequencies.

3. Skipping
Enable this feature to skip the current channel..

SOURCE SELECTION MENU

Enter the Mode menu to use the MODE button to choose the desired source: VGA, YPbPr, AV, SVIDEO, TV.

There are two different sources to choose from in the PC mode.

TV COLOR

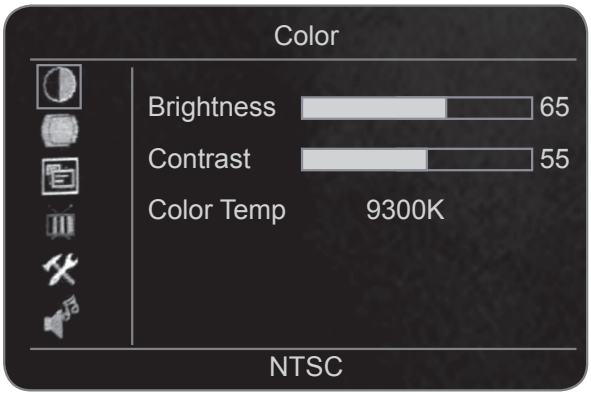

In the VGA mode, the Color menu contains the items Brightness, Contrast, Colour interface.
Make your choice by pushing CH+/CH-. Adjust the item by pushing ▲+/- .

ADJUST MENU

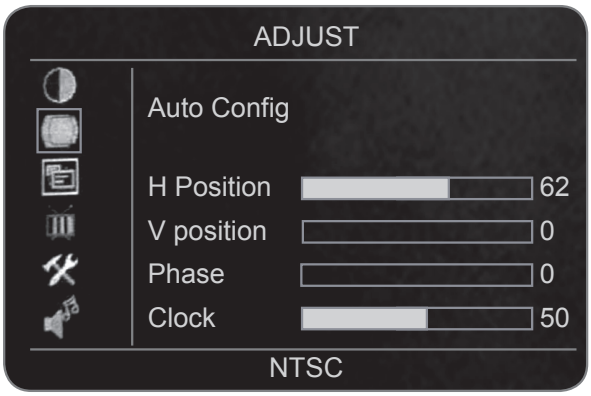

Enter the Adjust menu to adjust the items Automatic configuration, Automatic colour, Horizontal position, Vertical position, Encoding, and Clock. Make your choice by pushing CH+/CH-.

Note:
1. If the TV is in a very cold place, some flickering may occur after switching it on. This is normal; your TV is not broken.

2. Red, green or blue dots may appear on the screen. Nevertheless, these dots have no effect on the screen performance.

3. Do not touch the LCD screen with your fingers, as it may damage it irreversibly.

G. Troubleshooting

If the table box has a dot (●) in it, the problem can be resolved easily by following the instructions.

PROBLEM / SOLUTION	Choose a different channel. If everything is alright, the problem was in the broadcast station.	Check the aerial connection at the rear of the TV.	Check the aerial for damaged cord.	Change the aerial position (for indoor aerials).	The reception is probably disturbed by local factors such as other appliances.	Set correct tuning.	Set correct image brightness.	Set correct contrast.	Check if the station is transmitted in this colour scheme.	Set the correct colour scheme.	Check that the system is set correctly.	Check that the switch is in the "ON" position.	Check the remote control batteries.
No image and no sound	●	●	●			●					●	●	
Poor sound, image alright	●			●	●	●					●		
Poor image, sound alright	●	●	●	●	●	●	●				●		
Poor image	●	●	●	●		●					●		
Blurred image	●		●	●		●					●		
Doubled image	●	●	●	●		●							
Stripy image	●		●	●	●	●							
Distorted image	●		●	●		●					●		
Poor reception of some stations	●	●	●	●	●	●					●		
Horizontal lines			●	●	●								
Image rolls vertically	●		●	●	●						●		
Faded colours	●	●	●	●	●	●	●	●		●	●		
No colour	●	●	●	●		●			●	●	●		
Defective control by remote control													●
TV not responding to the remote control													●
Image outside of the screen												●	

H. Specifications

Screen size	
Power voltage / input	The ratings are shown on the label at the back of the TV.
System	Multi System
Transmitting frequency	PAL - B/G, D/K I SECAM - B/G, D/K
Video	PAL SECAM
Frequency range	44.25 - 863.25 MHz
Channel range	1-125
Aerial input	coaxial cable 75 Ω
Audio output	2 W x 2.8 Ω
LCD dimensions	17"
LCD weight	

The specifications may change without prior notice.

13. Self-diagnostic error codes

The hot tub has extensive self-diagnostic capabilities. In the event of trouble, it will report a warning or error, depending on the nature of the trouble. If a warning is reported, the hot tub will go on functioning, but errors require user intervention or servicing.

Errors
When the alarm goes off in the error status, it can be turned down by pressing **SCROLL**. The alarm will go silent automatically after four minutes.

Error 1 („PRIME FAILED“) Pump has not been primed with water
Priming the pump with water before start-up is a special case. This may not necessarily be a problem with the hot tub, but means that no water has been detected in the heater housing. Press the **DOWN** button to activate the main pump for 10 seconds to try and bring water to the heater. If this succeeds, normal running is restored. Failing that, the error reappears on the display.

Note: When this error appears, you will be offered the option to let the hot tub run in the demo mode; this option is not designed for end users. If you select the demo mode by mistake, please reset the hot tub (see below) to start it up over again.

In the event of any of errors 3-8, the hot tub operation is halted and will not resume until the controls are reset. The controls can only be reset by simultaneously pressing the buttons Light, Light Change, Pump 1 and Blower. The control panel remains in the error status even if the main switch is reset; the control panel will only resume normal operation after simultaneously pressing the buttons Light, Light Change, Pump 1 and Blower.

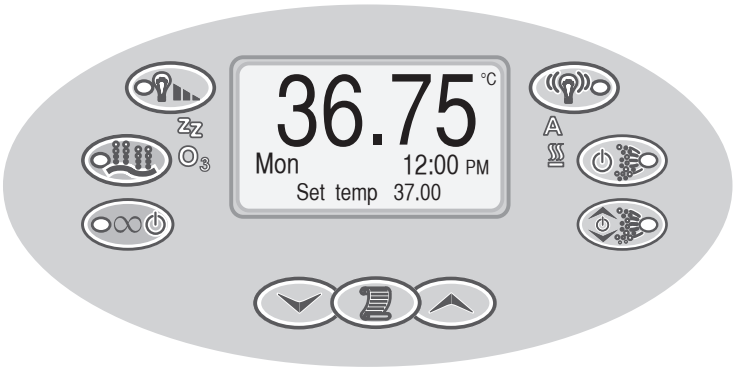

Error 3 („STUCK BUTTON“) Button jammed
This error indicates that at least one of the control panel buttons has become stuck or been held down for over a minute. It may be caused by the hot tub cover pressing against the control panel, or water having got inside the control panel, or the control panel having been damaged. Try resetting the hot tub. If the problem persists, please contact your hot tub supplier.

Error 4 (“NO WATER SENSOR”) Sensor for no water
This error indicates a problem with the optical water sensor by the heater. The problem may be caused by sensor disconnection or damage. Try resetting the hot tub. If the problem persists, please contact your hot tub supplier.

Error 5 („OVER TEMP“) Temperature too high
This error indicates that one of the digital temperature sensors, either by the heater or inside the hot tub, has detected a temperature of or over 45°C. It may be caused by excessive use of the pump in hot weather or a pump failure. Turn off the hot tub and wait till the water cools down; then press the buttons Light, Light Change, Pump 1 and Blower simultaneously. If the problem persists, please contact your hot tub supplier.

Error 6 („THERMAL CUT OUT“) Thermal fuse has been activated
This error indicates that the safety electromechanical thermal fuse in the heater has been activated. It may have been caused by a pocket of air in the heater, high temperature during use, or pump failure. The automatic thermal trip is only deactivated once the heater cools down below approx. 38°C. This device then has to be reset before it starts working again; press the buttons Light, Light Change, Pump 1 and Blower simultaneously.
If the problem persists, please contact your hot tub supplier.

Error 7 („STUCK RELAY“) Relay jammed
This error indicates a problem with the heating control circuitry inside the device. Please contact your hot tub supplier.

Error 8 („NO TEMP DATA“) No Temperature Data
This error indicates a problem with the digital temperature sensor in the heater or the hot tub wall. The sensor may have disconnected or been damaged. Try resetting the hot tub. If the problem persists, please contact your hot tub supplier.

Error 9 („CLOCK FAULT“) Defect in the real time clock
This error indicates a problem with the real time clock in the hot tub. Try resetting the hot tub. If the problem persists, please contact your hot tub supplier.

Warnings:
Warning 1 (“TEMP SENSOR FAILURE”) - Temperature sensor failure
This warning indicates that one of the two digital temperature sensors, either by the heater or inside the hot tub, no longer works correctly. The hot tub may still function, employing the other sensor, but a failure has likely occurred. Please contact your hot tub supplier.
If this warning appears when the equipment is first put into operation, you may have to restore the controls to the default factory settings. See Chapter 9.11 for loading the default factory settings.

14. Installation instructions

Performance parameters
Rated voltage: three-phase
three-phase 230/400 V 50/60 Hz
Maximum working current: 3x 16 A
Voltage resilience: 1250 V/min without breakdown
Insulation resistance >= 200 MΩ
Water resistance (protection) IPX5
Protection against electric shock: first degree

Loading capacity
Heating: 230 V / 3 kW / 13.6 A
Ozone generator: 230 V / 50-60 Hz / 80 mA
Blower: 230 V / 0.9 kW / 6.3 A
Two-speed pump 1: S1 - 230 V / 2.2 kW / 10 A S2 - 230 V / 0.45 kW /3.2 A
AUX pump 2 : 230 V / 2.2 kW / 10 A
Total power input: 8.1 kW/hour
Protection class: 1
Underwater bulb lamp: 12 V AC / 10 W
Radio: frequency range (FM: 87.0-108.0 MHz)
maximum output power: 20 W
speakers resistant to moisture

Electrical connection preparation and options
• alternating three-phase current 3x 400 V / 16 A

Make sure that the hot tub is always connected to a circuit protected with an earth-leakage trip with a residual current of 0.03 A. If a fuse has to be replaced, always use a fuse of the same type and rated current.

!!! THE DEVICE MAY ONLY BE CONNECTED BY A PERSON WITH PROFESSIONAL ELECTRICAL QUALIFICATIONS IN COMPLIANCE WITH DECREE NO. 50/1978 COLL. !!!

Hot tub installation

Preparing the site for hot tub installation
General: The hot tub must be installed on a level foundation slab of sufficient strength with respect to the load-bearing capacity of the structure. If installing the hot tub in the exterior, we recommend making a concrete monolithic foundation slab at least 10 cm thick. The load-bearing capacity of the foundation slab must also be designed with respect to the size and weight of the hot tub; consult your construction supervisor. The weight of the hot tub is shown in its technical specifications.

1. Interior hot tub installation
If installing the hot tub in the interior, make sure you observe the safety precautions. The chief requirements for safe hot tub operation include non-slip flooring and a drained installation site for the event of water pouring or spillage. Also remember that the air humidity will increase in the tub area. For these reasons, you are advised to adjust the installation site to these requirements.

2. Exterior hot tub installation
If installing the hot tub in the exterior, make sure you observe the safety precautions. The chief requirements for safe hot tub operation include non-slip tiling (flooring), and a drained installation site for the event of rain or water pouring or spillage over the hot tub rim. For these reasons, you are advised to adjust the installation site to these requirements.

Preparation for the power connection
For connection to three-phase alternating current, make sure you use a 16 A circuit breaker with characteristic C. Make sure that the hot tub is always connected to a circuit protected with an earth-leakage trip with a residual current of 0.03 A. If a fuse has to be replaced, always use a fuse of the same type and rated current.

Hot tub installation
Note: The hot tub has to be located in accordance with standards in force in your country; in the Czech Republic it is ČSN 33 2000-7-701.

General: You are advised to take advantage of the professional services of qualified and trained technicians for the installation, power connection and first startup. If you decide to install the hot tub by your own devices, please follow the advice below.

1. Carefully remove all the packaging in which the hot tub was delivered, and position the hot tub on the pre-rendered installation site.
2. Remove the front panel, situated at the side of the hot tub control panel. Remove the upper power switchboard cover, under which the circuit breaker, the earth-leakage trip and earth connector are situated. The connection using the appropriate power cord may only be performed by a person with professional qualifications.
3. Since your hot tub was thoroughly tested during the manufacturing process, meaning some proportion of impurities may have remained in the hot tub equipment parts and on its surface, you are advised to first clean the hot tub surface in an appropriate way. We recommend using lukewarm water for this cleaning. As a rule, clean the surface using suitable soft towels; avoid using any coarse abrasives and fabrics, which might cause damage to the spa surfaces. If you choose to use any detergent, make sure it is not aggressive to the spa surfaces.

1. Filling the hot tub with water
Fill the hot tub with a sufficient amount of water. The water level in the hot tub may never decrease below the skimmer level. If you detect any water leakage when filling the hot tub, interrupt the filling until the defect is eliminated.

2. Activating the power supply for the hot tub
If the hot tub is connected via a flexible cord, the power cord must not be exposed to any burdening with sharp objects or other effects. If that is the case, we advise you lay the power cord inside a protective sleeve. Switch on the circuit breaker reserved for the hot tub.

3. Rules for hot tub water quality maintenance
Several rules have to be followed to ensure the trouble-free operation of your hot tub. One of these rules is to periodically replace the entire bulk of water in the spa. We recommend changing the water at least once every 3 months, with respect to the frequency of operation and use of the hot tub. Spa water quality is best determined using testers, which can be obtained from your retailer. The tester allows you to measure (analyse) the total alkalinity (TA), calcium hardness (CH) and pH; these values have to be maintained.

Values recommended by the manufacturer: TA up to 125 ppm, CH up to 150 ppm, and pH 7.0-7.6. Under normal European circumstances, water for the common user will have been treated by the water utility that delivers it through the mains, so the alkalinity and calcium hardness are usually within the required limits. Yet it may be the case that the pH is not within our recommended range, that is pH 7.0-7.6. In most cases, the pH will be above the recommended range. To reduce the pH, you can use a chemical preparation known as pH-. Practical tip: We advise you carry out any measurements of water quality in the spa after the normal filtration and water cleaning cycle has ended (at least 2 hours) - never make any measurements immediately after using the hot tub. If you test the water quality immediately „after a bath", the pH and other values will be markedly distorted.

4. Programme the hot tub control unit using the control display
If everything is in order, you can start programming the hot tub control unit. After programming, cover the hot tub and allow its temperature to stabilise. Check the water level in the hot tub periodically.

15. Caring for your hot tub

General information
If the hot tub is in the exterior, we advise you prevent direct sunlight from acting upon the hot tub by, e.g., installing the hot tub under a pergola. Under no circumstances should you expose the hot tub to direct sunlight if it is waterless. Use the thermal cover for this purpose; it may have been supplied with your tub. The procedure for shutting down the hot tub, especially in winter, is described in Chapter 12, Winter and summer use.

Operating rules
The hot tub is not designed for commercial use. Under no circumstances is it permissible that the pump be activated without a sufficient water level in the hot tub. The water level must be kept at the indicated height. The user is not allowed to generate overpressure or negative pressure in the equipment by blocking the jets or the skimmer while the pump(s) is/are running, provided the hot tub has any. It is also impermissible to shut valves in the circuit, etc. Prevent foreign objects from entering the skimmer suction area. Make yourself thoroughly familiar with the Operating Instructions before first use. Always have the Instructions within easy reach. The manufacturer has introduced the client to the technical parameters of the hot tub and pointed out its advantages and drawbacks. Under certain circumstances, water aeration may alter slightly in hot tubs - in the circulation jets.

1. No unqualified interference with the hot tub equipment and wiring is permissible. Please contact a professional service provider in the event of any defect. Unqualified interference with the above may result in injury and loss of warranty.
2. Maintain overall spa cleanness periodically. The frequency of cleaning the hot tub depends on the frequency of using the spa.
3. Perform cleaning of the filter cartridges depending on the frequency of your use of the hot tub.

15.1 Filtration cartridges (installation, removal, maintenance)
Remove any packaging off the cartridges before installing them. Push the suction (skimmer) housing upwards. Remove the rough dirt basket. The suction area has two holes with a threaded section (thread) in the suction bottom. The cartridge has a thread at the bottom too. Screw the cartridge into the threaded suction part, clockwise, and tighten it gently. Reverse the installation procedure for replacing the cartridges.

Used cartridges may be reused repeatedly. Used cartridges have to be cleaned thoroughly before reuse. They should be cleaned with pressurised water; we advise you disinfect the cartridges using an appropriate disinfectant. After cleaning, all mechanical and other impurities should be removed from the cartridge.

Note: Hot water tends to swell the assembly, so do not worry if it is a bit difficult to remove it.

Maintenance of the spa frame surface finish
Minor scratches that do not penetrate the surface (acrylic) paint may be removed using high-quality car polish. Major scratches that have penetrated the acrylic top coat require renewal of the surface finish. Seek the advice of a hot tub retailer.

Hot tub thermal cover
Using the hot tub cover helps reduce the energy costs by minimising heat loss and evaporation. The attractive cover is an effective device to prevent leaves and other contaminants from getting into the hot tub when not in use. Please follow the instructions for using the hot tub and caring for the hot tub and the thermal cover.

Note: The hot tub cover is not designed to support weight. Nor is it an approved safety device that might be substitute for fencing around the bathing area. In order to protect the thermal cover and maintain safety, do not sit, stand or lie on the cover. Do not put any objects on it.

Caring for the hot tub thermal cover and maintenance instructions
Proper care for the cover is important: clean and tend it as necessary. Tend the surface in an appropriate way. If you use any common chemical detergent for the maintenance and cleaning, first make sure that the detergent does not damage the tended surface. We advise you make a cleaning test on a hidden spot.

1. Improper maintenance of hot tub water quality may affect the service life of the hot tub cover. Take consistent care of the hot tub water quality.
2. Vent the hot tub for several hours periodically by opening the thermal cover: this will prevent adverse effects on the thermal cover. We also advise you remove the thermal cover off the hot tub several times a year to allow it to dry thoroughly.
3. We advise you adhere to the above advice; no claims shall be accepted as justified if you fail to adhere to these rules.

16. Winter and summer use

Shutting down the hot tub in winter - procedure recommended by the supplier. When shutting down the hot tub for winter, it is absolutely imperative that all water is drained from the hot tub and removed from all the equipment (piping, pumps, etc.). We advise you take advantage of our professional services for these jobs. If you choose to take advantage of our professional services, please order them well in advance. If you shut down the hot tub for winter by yourself, always do so at ambient temperatures above freezing point. If the hot tub is being shut down for winter at temperatures below freezing point, the shutting down may turn out to be very difficult.

Winter season - operating the hot tub, year-round operation
If you decide to operate the hot tub in any mode in winter, please follow the advice below. However, winter operation is limited by ambient temperatures:
a) temperatures do not drop below -5°C
b) temperatures drop below -5°C

a) If the ambient temperature does not drop below -5°C, you can follow the Installation and User Manual for the hot tub, that is, use the automatic mode. The automatic mode makes sure the circulation pump and the electrical heater switch on (when temperatures drop below +5°C) until the water in the tub reaches 10°C, when both the pump and the heater switch off automatically; the cycle is repeated when the temperature drops again. However, this mode of operation imperatively requires absolutely clean filter cartridges; we advise you remove one of the filter cartridges. Should the filter cartridges be clogged beyond a certain limit, the water flow through the circulation pump would decrease or stop, and the hot tub control unit would interpret the low or zero flow by automatically switching off both the circulation pump and the heater. If that happens, there is a risk of total freezing of water inside the equipment, which may result in serious damage to the entire hot tub equipment. Therefore, we advise you check the hot tub functioning on a daily basis to prevent damage to your hot tub. During the check, refill the water from time to time as needed. The water level may decrease due to natural water evaporation. This mode of operating the hot tub is not recommended by the supplier.

b) If the ambient temperature drops below -5°C, the water temperature inside the hot tub has to be kept at 20°C. Both the filter cartridges can be in operation in this mode as long as they are checked for cleanness on a daily basis. Should the filter cartridges be clogged beyond a certain limit, the water flow through the circulation pump would decrease or stop, and the hot tub control unit would interpret the low or zero flow by automatically switching off both the circulation pump and the heater. If that happens, there is a risk of total freezing of water inside the equipment, which may result in serious damage to the entire hot tub equipment. Also, check the water level in the hot tub on a daily basis: the water level must not decrease below the control sensor. If the water level decreases below the sensor, the control unit disengages the circulation pump and thus also the electrical heater, meaning the water could freeze in the equipment, which may seriously damage the hot tub. Therefore, we advise you check the hot tub functioning on a daily basis to prevent damage to your hot tub. During the check, refill the water from time to time as needed. The water level may decrease due to natural evaporation.

If the above is not respected and the hot tub gets damaged, such damage cannot be claimed under warranty.

Summer season
Do not expose the hot tub to the direct effects of solar radiation; do not use inappropriate detergents for maintenance. Prevent direct contact of the hot tub frame with chemicals and scratching of the surface with sharp objects. Ensure the safety of children with adult supervision. The accessories may only be operated by instructed and fit persons over 18 years of age, who may also handle the chemicals, which have to be put out of reach of children.

17. Troubleshooting

Problem	Likely causes	Solution
Turbid water	Dirty filters Neglected hygiene Dispersed particles / organic substances Water used for too long	Clean the filters. Treat the spa with a disinfectant. Add disinfectant. Adjust the pH and/or alkalinity as recommended. Turn on the massage pumps and clean the filters. Drain the spa and refill it.
Water odour	Too many organic substances in the water. Neglected hygiene. pH too low.	Treat the spa with a disinfectant. Add disinfectant. Adjust the pH, then refill the spa.
Chlorine odour	Too much free chlorine. pH too low.	Replace 1/3 of the spa water. Adjust the pH as recommended.
Musty odour	Bacteria or algae propagating.	Treat the spa with a disinfectant. If the problem is visible or lasting, drain the spa, clean it and refill it.
Organic sediment/circle of scum around the spa	Deposition of oils and dirt.	Wipe the spa with a clean cloth. If there is too much scum, drain the spa. Remove the scum with a detergent and refill the spa. Treat the spa with a disinfectant and adjust the pH.
Algal growth	pH too high. Too little disinfectant.	Treat the spa with a disinfectant and keep its concentration.
Reduced transparency	pH too low. Too little disinfectant.	Adjust the pH. Treat the spa with a disinfectant and keep its concentration.
Limescale	Too much calcium in the water; too much total alkalinity and pH too high.	If scale needs removing, drain the spa, remove the scale, refill the spa and balance the water composition.
Hot tub does not work as a whole	Water level too low. Power supply failure. Heater off.	Add water. Check the power supply. Restart the heater. Disconnect the power supply for at least 30 seconds for the security thermostat to restart. If reset is impossible, check the filters for clogging. If the hot tub keeps switching off, call maintenance.
The hot tub does not warm up and the light is on (readiness and power indicators blinking).	Water level too low. Security thermostat off. Integrated pressure switch interrupted. Circulation pump thermal trip off. Dirty filters.	Check the filters. The integrated pressure switch restarts when water flow through the heater is restored. Call maintenance if the heater switches off too often. Checks the filters and piping leaks. Disconnect the hot tub from the power supply and allow the circulation pump to cool down. The circulation pump thermal trip restarts when the pump cools down and the power supply is reactivated. Call maintenance if the circulation pump thermal trip switches off too often.
Reduced pump performance.	Water level too low. Dirty filters. Air controls shut.	Add water. Clean the filters. Open the air controller.
Light not on.	Faulty wiring or light assembly.	Call maintenance.

18. Safety instructions

Preventing risk to children

1. To reduce the risk of children getting injured, do not allow children to use this hot tub without continuous close supervision.
2. To reduce the risk of children getting injured, lower temperatures are recommended for younger children. Before allowing children to enter the hot tub, check the water temperature with your hands and make sure it is suitable for children.
3. Remember that wet surfaces may be slippery. Remind children to be careful when entering and leaving the hot tub.
4. Do not allow children to step on the hot tub thermal cover.

Preventing risk to adults

1. To reduce the risk of adults getting injured, do not remove or lose any of the suction fittings. Never operate the hot tub if any of the suction fittings are damaged or missing.
2. Remember that wet surfaces may be extremely slippery. Be aware of the danger of slipping and falling when entering or leaving the hot tub.
3. For medical reasons, people with infectious diseases are not allowed to use the hot tub.
4. Do not bring loose clothing or pendant jewels close to the rotating parts of the hot tub (rotary massage jets).
5. The use of alcohol, drugs, or medication before or during hot tub use may lead to sudden unconsciousness with the possibility of drowning. People who use medication have to consult a physician before using the hot tub; some drugs may cause drowsiness in the user, while others may affect the heart, blood pressure and circulation.
6. Pregnant women have to consult a physician before using the hot tub.

Preventing the risk of electrocution

THE DEVICE MAY ONLY BE CONNECTED BY A PERSON WITH PROFESSIONAL ELECTRICAL QUALIFICATIONS IN COMPLIANCE WITH DECREE NO. 50/1978 COLL.

1. Test the functionality of the earth-leakage trip before use. Press the TEST button. The device must trip. Restore the power supply by switching it on again. The hot tub must always be connected via an earth-leakage trip with a residual current of 0.03 A.
2. Do not permit any electrical appliances such as lights, telephones, radios or television sets, within 1.5 m of the hot tub. Failure to observe the safe distance may lead to death or serious injury by electric current, should the appliance fall into the hot tub.
3. Install the hot tub in a way that the drain is as far from the electrical box and all the electrical components as possible.
4. Before servicing any of the electrical components, disconnect the hot tub from the power supply.

Tip: Your hot tub is equipped with two pumps: a single-speed one and a two-speed one, which make it possible to operate each half of the jet system separately or both at the same time. Do not connect the power supply to an empty hot tub. Otherwise it may get damaged.

Warranty terms and conditions
The warranty conditions are governed by your supplier‘s trade and warranty terms and conditions.

Safe product disposal at the end of its service life
When the product comes to the end of its service life, make sure it is disposed of ecologically by a professional company.

Claims and servicing
Claims are governed by applicable consumer protection laws. If you find an irreparable defect, please contact your supplier in writing.

Date: .....

Supplier

BRILUX
SWIMMING POOL EQUIPMENT